




## ***NFI Transportation Cab Kits***

MKNFITRA100 - NFI Transportation Blue Sleeper Cab Kit  
MKNFITRA100VNL - NFI Transportation Blue Sleeper Cab with airshield window Kit  
MKNFITRA100VNL6700 NFI Transport Blue Sleeper Cab With Airshield Window Kit  
MKNFITRA105 - NFI Transportation White Sleeper Cab Kit  
MKNFITRA105VNL - NFI Transportation White Sleeper Cab with airshield window Kit  
MKNFITRA105VNL6700 NFI Transport White Sleeper Cab with airshield window Kit  
MKNFITRA126 - NFI Transportation Blue Day Cab Kit  
MKNFITRA126A- National Distribution Center Blue Day Cab Kit  
MKNFITRA126ZE - NFI Transportation Zero Emissions Blue Day Cab Kit  
MKNFITRA130 - NFI Transportation White Day Cab Kit  
MKNFITRA130A - National Distribution Center White Day Cab Kit  
MKNFITRA142 - NFI On-Road White Yard Truck Kit  
MKNFITRA143 - NFI Off-Road White Yard Truck Kit  
MKNFITRA150 - NFI On-Road White Yard Truck Kit  
MKNFITRA151 - NFI Off-Road White Yard Truck Kit  
MKNFITRA162 - National Freight Owner Operator Blue Cab Kit  
MKNFITRA163 - National Freight Owner Operator White Cab Kit  
MKNFITRA173 - National Freight Owner Operator Cab Kit  
MKNFITRA100C - NFI IPD, LLC Canada Blue Sleeper Cab Kit  
MKNFITRA105C - NFI IPD, LLC Canada White Sleeper Cab Kit  
MKNFITRA125C - NFI IPD, LLC Canada White Day Cab Kit  
MKNFITRA126C - NFI IPD, LLC Canada Blue Day Cab Kit  
MKNFITRA173C - NFI IPD, LLC Canada Owner Operator Cab Kit  
MKNFITRA164 - Decal Placement Instructions  
MKNFITRA209 – NFI Mack Anthem Blue Day Cab with Peep Window Kit  
MKNFIVSM - NFI MHE Fleet Services Van Small logo layout  
MKNFIVLG - NFI MHE Fleet Services Van Large logo layout  
MKNFITRL169 - Box/Straight Truck Kit

# Kit Number MKNFITRA100

NFI Transportation  
Blue Sleeper Cab Kit  
Updated 10-26-2023

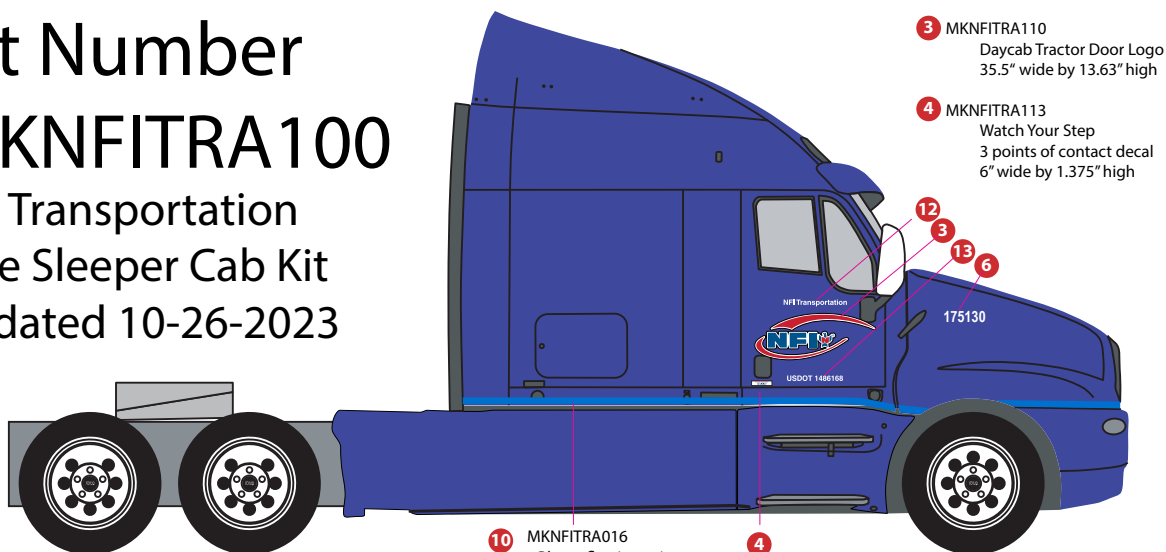

3 MKNFITRA110  
Daycab Tractor Door Logo  
35.5" wide by 13.63" high

4 MKNFITRA113  
Watch Your Step  
3 points of contact decal  
6" wide by 1.375" high

7 MKNFITRA148 - NFI Cares Decal  
7" wide by 2" high  
Place on the dashboard



3 MKNFITRA110  
Daycab Tractor Door Logo  
35.5" wide by 13.63" high

9 MKNFITRA174 -  
Driver Reminder  
3" wide by 3" high  
Place on the back of  
the visor inside cab

**Attention: NFI Driver**  
Your truck is equipped with an  
automated braking and  
Lane Departure System.  
Please contact your Driver Manager  
as soon as possible to receive the  
System Driver Training video on  
the training video in the NFI  
mknfitra100 kit.  
www.mknfitra.com


NFI Transportation

12 MKNFITRA199 -  
NFI Transportation White  
18.6" wide by 1.7" high

13 MKNFITRA200 -  
USDOT 1486168 White  
16.4" wide by 1.7" high


USDOT 1486168

10 MKNFITRA016  
Blue reflective stripe

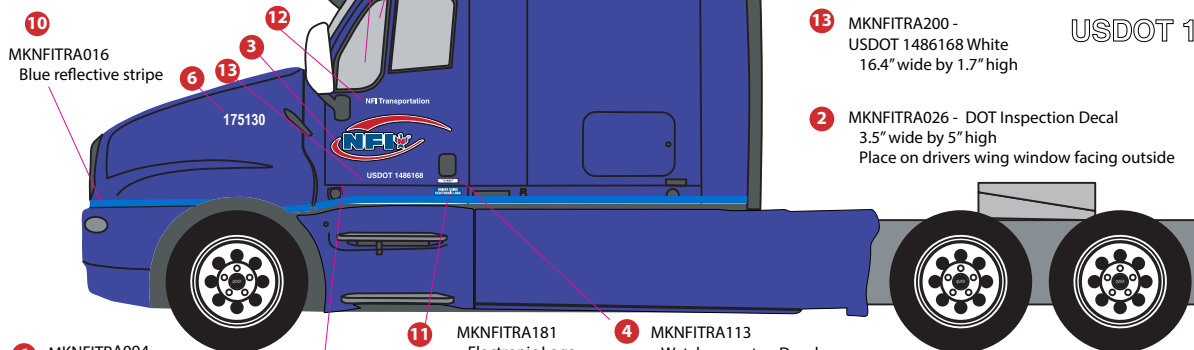

6 MKNFITRA094  
5" 6 DIGIT UNIT #'S WHITE  
Note: place on back of cab below  
window

5 MKNFITRA114  
NEW Air Shield logo  
47" wide by 18" high

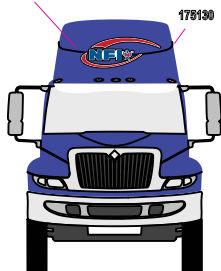

8 MKNFITRA164 -  
Tire Check Reminder  
2.75" wide by 1.75" high  
Placement instruction  
sheet attached



1 MKNFITRA025 -  
Breakdown Support Decal  
3.75" wide by 2.75" high  
Placement in dash



DRIVER USING  
ELECTRONIC LOGS

11 MKNFITRA181  
Electronic Logs  
8" wide by 2.5" high

4 MKNFITRA113  
Watch your step Decal  
6" wide by 1.375" high

WATCH YOUR STEP  
USE 3-POINTS  
OF CONTACT

## PART NUMBER QTY DESCRIPTION

1	MKNFITRA025	1	BREAKDOWN SUPPORT
2	MKNFITRA026	1	DOT INSPECTION Decal
3	MKNFITRA110	2	CAB DOOR LOGO
4	MKNFITRA113	2	WATCH YOUR STEP 3-POINTS
5	MKNFITRA114	1	AIR SHIELD LOGO
6	MKNFITRA094	3	5" WHITE 6 DIGIT UNIT #'S
7	MKNFITRA148	1	NFI CARES DECAL
8	MKNFITRA164	1	TIRE CHECK REMINDER
9	MKNFITRA174	1	DRIVER REMINDER (FOR VISOR)
10	MKNFITRA016	1	BLUE REFLECTIVE 2" X 25" ROLL
11	MKNFITRA181	1	ELECTRONIC LOG
12	MKNFITRA199	2	NFI TRANSPORTATION White - 18.6"w x 2" high
13	MKNFITRA200	2	USDOT 1486168 White - 16.4"w x 1.7"h

**vernon**  
graphics | promotions

# Kit Number

## MKNFITRA100

### NFI Transportation


### Blue Sleeper Cab Kit Parts

Updated 10-26-2023

- 1** MKNFITRA025 - Breakdown Support Decal  
3.75" wide by 2.75" high  
Blue on white square cut  
Place in dash



- 2** MKNFITRA026 - DOT Inspection Decal  
3.5" wide by 5" high  
Place on drivers wing window facing outside  
Dates change yearly

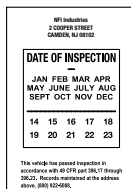

- 3** MKNFITRA110 - Tractor Door Logo  
35.5" wide by 13.63" high  
Red and Blue on reflective diecut



- 4** MKNFITRA113  
Watch Your Step  
3 points of contact decal  
6" wide by 1.375" high  
Red and blue on white square cut



- 5** MKNFITRA114 - Air Shield Logo  
47" wide by 18" high  
Red and Blue, Diecut on reflective material



- 6** MKNFITRA094 - UNIT NUMBER  
5" Blue 6 digit Unit #'s  
White diecut  
0123456789

- 7** MKNFITRA148 - NFI Cares  
7" wide by 2" high  
Blue and red on white  
Square cut Place on the dashboard



- 8** MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Green on white square cut  
See placement instruction sheet



- 9** MKNFITRA174 - Driver Reminder  
3" wide by 3" high  
Place on back of visor inside cab  
Black on white square cut



- 10** MKNFITRA016 - Blue reflective 2" X 25' Roll

- 11** MKNFITRA181 - Electronic log decal  
8" wide by 2.5" high  
Blue on white square cut




- 12** MKNFITRA199 - NFI TRANSPORTATION  
18.6" wide by 2" high  
White

NFI Transportation


- 13** MKNFITRA200 - USDOT 1486168  
16.4" wide by 1.7" high  
White

USDOT 1486168


NFI Transportation  
Blue Sleeper Cab Kit  
with airshield window  
Updated 4-23-2024



**3** MKNFITRA110  
Daycab Tractor Door Logo  
35.5" wide by 13.63" high



**3** MKNFITRA110  
Cab Door logo  
35.5" wide by 13.63" high



**1** MKNFITRA025 -  
Breakdown Support Decal  
3.75" wide by 2.75" high  
Placement in dash





# Kit Number

## MKNFITRA100VNL

### NFI Transportation

### Blue Sleeper Cab


### with airshield window Kit Parts

Updated 10-26-2023

- 1** MKNFITRA025 - Breakdown Support Decal  
3.75" wide by 2.75" high  
Blue on white square cut  
Place in dash



- 2** MKNFITRA026 - DOT Inspection Decal  
3.5" wide by 5" high  
Place on drivers  
wing window  
facing outside  
Dates change yearly

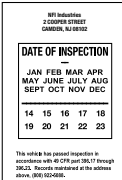

- 3** MKNFITRA110 - Tractor Door Logo  
35.5" wide by 13.63" high  
Red and Blue on reflective diecut



- 4** MKNFITRA113  
Watch Your Step  
3 points of contact decal  
6" wide by 1.375" high  
Red and blue on white square cut



- 5** MKNFITRA094 - UNIT NUMBER  
5" Blue 6 digit Unit #'s  
White diecut
- 0123456789

- 6** MKNFITRA148 - NFI Cares  
7" wide by 2" high  
Blue and red on white  
Square cut Place on the dashboard



- 7** MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Green on white square cut  
See placement instruction sheet



- 8** MKNFITRA174 - Driver Reminder  
3" wide by 3" high  
Place on back of visor inside cab  
Black on white square cut



- 9** MKNFITRA016 - Blue reflective 2" X 25' Roll

- 10** MKNFITRA181 - Electronic log decal  
8" wide by 2.5" high  
Blue on white square cut













- 11** MKNFITRA199 - NFI TRANSPORTATION  
18.6" wide by 2" high  
White

NFI Transportation

- 12** MKNFITRA200 - USDOT 1486168  
16.4" wide by 1.7" high  
White

USDOT 1486168

NFI Transportation  
Blue Sleeper Cab Kit  
No airshield window  
Updated 2-27-2025

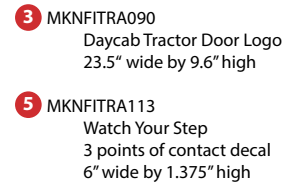

**vernon**  
graphics | promotions

# Kit Number

## MKNFITRA100VNL6700

NFI Transportation

Blue Sleeper Cab


NO airshield window Kit Parts

Updated 2-27-2025

- 1 MKNFITRA025 - Breakdown Support Decal  
3.75" wide by 2.75" high  
Blue on white square cut  
Place in dash



- 2 MKNFITRA026 - DOT Inspection Decal  
3.5" wide by 5" high  
Place on drivers wing window facing outside  
Dates update yearly

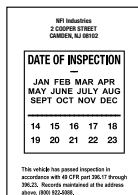

- 3 MKNFITRA090 - Tractor Door Logo  
23.5" wide by 9.6" high  
Red and Blue on reflective diecut



- 4 MKNFITRA114 - Airshield Logo  
47" wide by 18" high  
Red and Blue on reflective diecut



- 5 MKNFITRA113  
Watch Your Step  
3 points of contact decal  
6" wide by 1.375" high  
Red and blue on white square cut



- 6 MKNFITRA094 - UNIT NUMBER  
5" Blue 6 digit Unit #'s  
White diecut

0123456789

- 7 MKNFITRA148 - NFI Cares  
7" wide by 2" high  
Blue and red on white  
Square cut Place on the dashboard



- 8 MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Green on white square cut  
See placement instruction sheet



- 9 MKNFITRA174 - Driver Reminder  
3" wide by 3" high  
Place on back of visor inside cab  
Black on white square cut



- 10 MKNFITRA016 - Blue reflective 2" X 25' Roll

- 11 MKNFITRA181 - Electronic log decal  
8" wide by 2.5" high  
Blue on white square cut



- 12 MKNFITRA199 - NFI TRANSPORTATION  
18.6" wide by 2" high  
White

NFI Transportation

- 13 MKNFITRA200 - USDOT 1486168  
16.4" wide by 1.7" high  
White

USDOT 1486168

**vernon**  
graphics | promotions

# Kit Number

## MKNFITRA105

### NFI Transportation

### White Sleeper Cab Kit

### Updated 10-27-2023

**Kit Number**  
**MKNFITRA105**  
**NFI Transportation**  
**White Sleeper Cab Kit**  
**Updated 10-27-2023**

**3** MKNFITRA110  
Daycab Tractor Door Logo  
35.5" wide by 13.63" high

**4** MKNFITRA113  
Watch Your Step  
3 points of contact decal  
6" wide by 1.375" high

**10** MKNFITRA015  
White reflective stripe

**7** MKNFITRA148 - NFI CARES Decal  
7" wide by 2" high  
Place on the dashboard

**10** MKNFITRA015  
White reflective stripe

**12** MKNFITRA174 -  
Driver Reminder  
3" wide by 3" high  
Place on the back of  
the visor inside cab

**12** MKNFITRA197 -  
NFI Transportation Blue  
18.6" wide by 2" high

**13** MKNFITRA198 -  
USDOT 1486168 Blue  
16.4" wide by 1.7" high

**2** MKNFITRA026 - DOT Inspection Decal  
3.5" wide by 5" high  
Place on drivers wing window facing outside

**6** MKNFITRA131  
5" 6 DIGIT UNIT #'S BLUE  
Note: place on back of cab below  
window

**5** MKNFITRA114  
NEW Air Shield logo  
47" wide by 18" high

**8** MKNFITRA164 -  
Tire Check Reminder  
2.75" wide by 1.75" high  
Placement instruction  
sheet attached

**1** MKNFITRA025 -  
Breakdown Support Decal  
3.75" wide by 2.75" high  
Placement in dash

**11** MKNFITRA181  
Electronic Logs  
8" wide by 2.5" high

**4** MKNFITRA113  
Watch your step Decal  
6" wide by 1.375" high

**13** MKNFITRA198  
Blue - 18.6"w x 2" high  
USDOT 1486168  
Blue - 16.4"w x 1.7"h

**Attention: of Driver**  
Your truck is equipped with an  
automated braking and  
Lane Departure System.  
Please contact your Driver Manager  
as soon as possible to receive the  
System Driver Training video on  
how to use the system.  
www.nfi.com

**DATE OF INSPECTION**  
JAN FEB MAR APR  
MAY JUN JUL AUG  
SEPT OCT NOV DEC  
14 15 16 17 18  
19 20 21 22 23

**DRIVER USING  
ELECTRONIC LOGS**

**WATCH YOUR STEP  
USE 3-POINTS  
OF CONTACT**

PART NUMBER	QTY	DESCRIPTION
1	1	BREAKDOWN SUPPORT
2	1	DOT INSPECTION Decal
3	2	CAB DOOR LOGO
4	2	WATCH YOUR STEP 3-POINTS
5	1	AIR SHIELD LOGO
6	3	5" BLUE 6 DIGIT UNIT #'S
7	1	NFI CARES DECAL
8	1	TIRE CHECK REMINDER
9	1	DRIVER REMINDER (FOR VISOR)
10	1	WHITE REFLECTIVE 2" X 25' ROLL
11	1	ELECTRONIC LOG
12	2	NFI TRANSPORTATION
		Blue - 18.6"w x 2" high
		USDOT 1486168
		Blue - 16.4"w x 1.7"h
13	2	USDOT 1486168
		Blue - 16.4"w x 1.7"h

**vern**  
graphics | promotions

# Kit Number

## MKNFITRA105

### NFI Transportation


### White Sleeper Cab Kit Parts

Updated 10-27-2023

- 1** MKNFITRA025 - Breakdown Support Decal  
3.75" wide by 2.75" high  
Blue on white square cut  
Place in dash



- 2** MKNFITRA026 - DOT Inspection Decal  
3.5" wide by 5" high  
Place on drivers wing window facing outside  
Dates change yearly

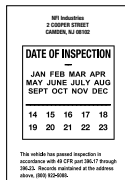

- 3** MKNFITRA110 - Tractor Door Logo  
35.5" wide by 13.63" high  
Red and Blue on reflective diecut



- 4** MKNFITRA113  
Watch Your Step  
3 points of contact decal  
6" wide by 1.375" high  
Red and blue on white square cut



- 5** MKNFITRA114 - Air Shield Logo  
47" wide by 18" high  
Red and Blue, Diecut on reflective material



- 6** MKNFITRA131 - UNIT NUMBER  
5" Blue 6 digit Unit #'s  
Blue diecut

**0123456789**

- 7** MKNFITRA148 - NFI Cares  
7" wide by 2" high  
Blue and red on white  
Square cut Place on the dashboard



- 8** MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Green on white square cut  
See placement instruction sheet



- 9** MKNFITRA174 - Driver Reminder  
3" wide by 3" high  
Place on back of visor inside cab  
Black on white square cut



- 10** MKNFITRA015 - White reflective 2" X 25' Roll

- 11** MKNFITRA181 - Electronic log decal  
8" wide by 2.5" high  
Blue on white square cut



- 12** MKNFITRA197 - NFI TRANSPORTATION  
18.6" wide by 2" high  
Blue

**NFI Transportation**


- 13** MKNFITRA198 - USDOT 1486168  
16.4" wide by 1.7" high  
Blue

**USDOT 1486168**

# Kit Number

## MKNFITRA105VNL


NFI Transportation  
White Sleeper Cab Kit  
Updated 4-23-2024

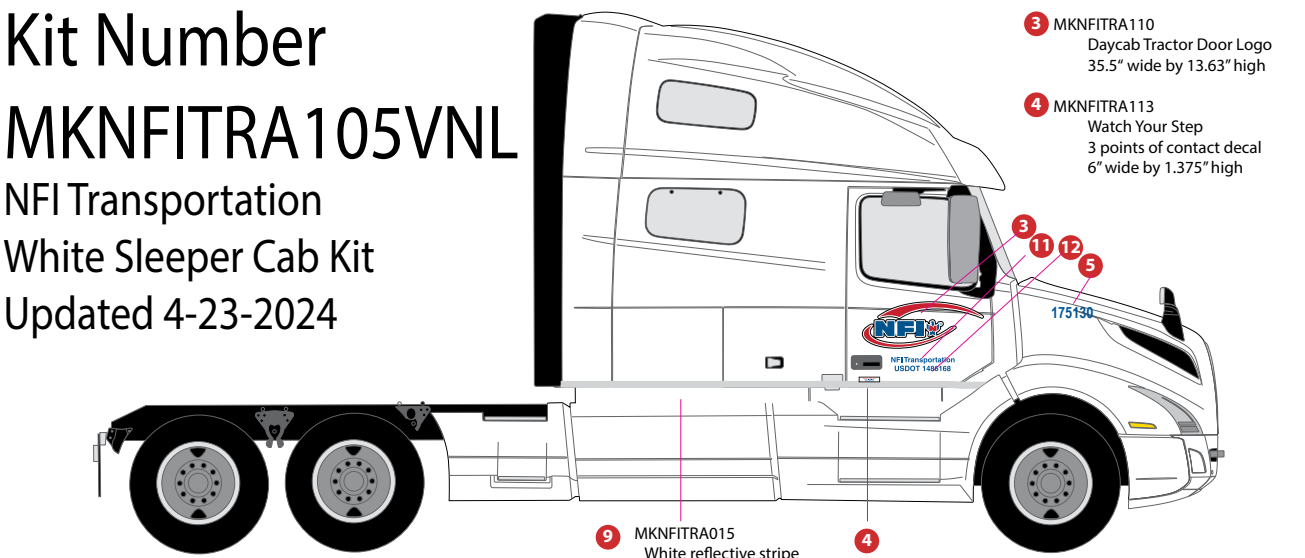

- 6 MKNFITRA148 - NFI Cares Decal  
7" wide by 2" high  
Place on the dashboard


- 3 MKNFITRA110  
Daycab Tractor Door Logo  
35.5" wide by 13.63" high

- 9 MKNFITRA015  
White reflective stripe

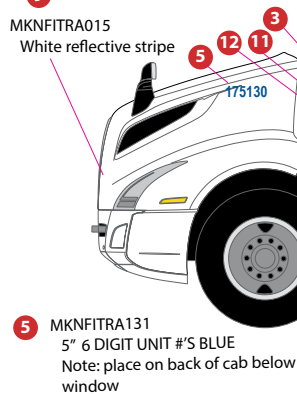

- 5 MKNFITRA131  
5" 6 DIGIT UNIT #S BLUE  
Note: place on back of cab below window

- 3 MKNFITRA110  
Daycab Tractor Door Logo  
35.5" wide by 13.63" high

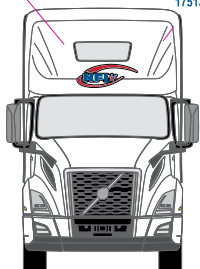

- 10 MKNFITRA181  
Electronic Logs  
8" wide by 2.5" high

- 4 MKNFITRA113  
Watch your step Decal  
6" wide by 1.375" high

- 8 MKNFITRA174 -  
Driver Reminder  
3" wide by 3" high  
Place on the back of the visor inside cab

- 11 MKNFITRA197 -  
NFI Transportation Blue  
18.6" wide by 2" high

- 12 MKNFITRA198 -  
USDOT 1486168 Blue  
16.4" wide by 1.7" high

- 2 MKNFITRA026 - DOT Inspection Decal  
3.5" wide by 5" high  
Place on drivers wing window facing outside

- 7 MKNFITRA164 -  
Tire Check Reminder  
2.75" wide by 1.75" high  
Placement instruction sheet attached

- 1 MKNFITRA025 -  
Breakdown Support Decal  
3.75" wide by 2.75" high  
Placement in dash

- 4 MKNFITRA113  
Watch your step Decal  
6" wide by 1.375" high

- 8 MKNFITRA174 -  
Driver Reminder  
3" wide by 3" high  
Place on the back of the visor inside cab

- 11 MKNFITRA197 -  
NFI Transportation Blue  
18.6" wide by 2" high

- 12 MKNFITRA198 -  
USDOT 1486168 Blue  
16.4" wide by 1.7" high

PART NUMBER	QTY	DESCRIPTION
1 MKNFITRA025	1	BREAKDOWN SUPPORT
2 MKNFITRA026	1	DOT INSPECTION Decal
3 MKNFITRA110	3	CAB DOOR LOGO
4 MKNFITRA113	2	WATCH YOUR STEP 3-POINTS
5 MKNFITRA131	3	5" BLUE 6 DIGIT UNIT #S
6 MKNFITRA148	1	NFI CARES DECAL
7 MKNFITRA164	1	TIRE CHECK REMINDER
8 MKNFITRA174	1	DRIVER REMINDER (FOR VISOR)
9 MKNFITRA015	1	WHITE REFLECTIVE 2" X 25' ROLL
10 MKNFITRA181	1	ELECTRONIC LOG
11 MKNFITRA197	2	NFI TRANSPORTATION Blue - 18.6"w x 2" high
12 MKNFITRA198	2	USDOT 1486168 Blue - 16.4"w x 1.7"h

**vernon**  
graphics | promotions



# Kit Number


## MKNFITRA105VNL

NFI Transportation  
White Sleeper Cab Kit  
with Airshield windo Parts  
Updated 10-27-2023

- 1 MKNFITRA025 - Breakdown Support Decal  
3.75" wide by 2.75" high  
Blue on white square cut  
Place in dash



- 2 MKNFITRA026 - DOT Inspection Decal  
3.5" wide by 5" high  
Place on drivers  
wing window  
facing outside  
Dates change yearly

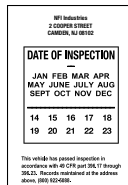

- 3 MKNFITRA110 - Tractor Door Logo  
35.5" wide by 13.63" high  
Red and Blue on reflective diecut



- 4 MKNFITRA113  
Watch Your Step  
3 points of contact decal  
6" wide by 1.375" high  
Red and blue on white square cut

**WATCH YOUR STEP  
USE 3-POINTS  
OF CONTACT**

- 5 MKNFITRA131 - UNIT NUMBER  
5" Blue 6 digit Unit #'s  
Blue diecut

**0123456789**

- 6 MKNFITRA148 - NFI Cares  
7" wide by 2" high  
Blue and red on white  
Square cut Place on the dashboard



- 7 MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Green on white square cut  
See placement instruction sheet



- 8 MKNFITRA174 - Driver Reminder  
3" wide by 3" high  
Place on back of visor inside cab  
Black on white square cut



- 9 MKNFITRA015 - White reflective 2" X 25' Roll

- 10 MKNFITRA181 - Electronic log decal  
8" wide by 2.5" high  
Blue on white square cut

**DRIVER USING  
ELECTRONIC LOGS**

- 11 MKNFITRA197 - NFI TRANSPORTATION  
18.6" wide by 2" high  
Blue

**NFI Transportation**

- 12 MKNFITRA198 - USDOT 1486168  
16.4" wide by 1.7" high  
Blue

**USDOT 1486168**

# Kit Number

## MKNFITRA105VNL6700

NFI Transportation

White Sleeper Cab Kit

Updated 2-20-2025

**3** MKNFITRA090  
Daycab Tractor Door Logo  
23.5" wide by 9.6" high

**4** MKNFITRA114  
Airshield Door Logo  
47" wide by 18" high

**6** MKNFITRA148 - NFI Cares Decal  
7" wide by 2" high  
Place on the dashboard

**10** MKNFITRA015  
White reflective stripe

**12** MKNFITRA197 -  
NFI Transportation Blue  
18.6" wide by 2" high

**13** MKNFITRA198 -  
USDOT 1486168 Blue  
16.4" wide by 1.7" high

**2** MKNFITRA026 - DOT Inspection Decal  
3.5" wide by 5" high  
Place on drivers wing window facing outside

**1** MKNFITRA025 -  
Breakdown Support Decal  
3.75" wide by 2.75" high  
Placement in dash

**5** MKNFITRA174 -  
Driver Reminder  
3" wide by 3" high  
Place on the back of the visor inside cab

**11** MKNFITRA181  
Electronic Logs  
8" wide by 2.5" high

**5** MKNFITRA113  
Watch your step Decal  
6" wide by 1.375" high

**6** MKNFITRA131  
5" 6 DIGIT UNIT #'S BLUE  
Note: place on back of cab below window

**4** MKNFITRA114  
Daycab Tractor Door Logo  
47" wide by 18" high

**7** MKNFITRA164 -  
Tire Check Reminder  
2.75" wide by 1.75" high  
Placement instruction sheet attached

**10** MKNFITRA015  
White reflective stripe

**12** MKNFITRA197 -  
NFI Transportation Blue  
18.6" wide by 2" high

**13** MKNFITRA198 -  
USDOT 1486168 Blue  
16.4" wide by 1.7" high

**2** MKNFITRA026 - DOT Inspection Decal  
3.5" wide by 5" high  
Place on drivers wing window facing outside

**1** MKNFITRA025 -  
Breakdown Support Decal  
3.75" wide by 2.75" high  
Placement in dash

**5** MKNFITRA174 -  
Driver Reminder  
3" wide by 3" high  
Place on the back of the visor inside cab

**11** MKNFITRA181  
Electronic Logs  
8" wide by 2.5" high

**5** MKNFITRA113  
Watch your step Decal  
6" wide by 1.375" high

**Attention:** NFI Driver  
Your tractor is equipped with an  
automated Braking and  
Lane Departure System.  
Please contact your Driver Manager  
as soon as possible to receive the  
System Driver Training video on  
NFI training and/or MyNFI  
mytraining@nfiexpress.com  
www.myNFI.com

**NFI Transportation**

**USDOT 1486168**

DATE OF INSPECTION											
JAN	FEB	MAR	APR	MAY	JUNE	JULY	AUG	SEPT	OCT	NOV	DEC
14	15	16	17	18	19	20	21	22	23		

This mark has expired features to  
expiring date and it has the shape  
NFI. Please identify the date  
when needed.

**vernon**  
graphics | promotions

PART NUMBER	QTY	DESCRIPTION
<b>1</b> MKNFITRA025	1	BREAKDOWN SUPPORT
<b>2</b> MKNFITRA026	1	DOT INSPECTION Decal
<b>3</b> MKNFITRA090	2	CAB DOOR LOGO
<b>4</b> MKNFITRA114	1	AIRSHIELD LOGO
<b>5</b> MKNFITRA113	2	WATCH YOUR STEP 3-POINTS
<b>6</b> MKNFITRA131	3	5" BLUE 6 DIGIT UNIT #'S
<b>7</b> MKNFITRA148	1	NFI CARES DECAL
<b>8</b> MKNFITRA164	1	TIRE CHECK REMINDER
<b>9</b> MKNFITRA174	1	DRIVER REMINDER (FOR VISOR)
<b>10</b> MKNFITRA015	1	WHITE REFLECTIVE 2" X 25' ROLL
<b>11</b> MKNFITRA181	1	ELECTRONIC LOG
<b>12</b> MKNFITRA197	2	NFI TRANSPORTATION Blue - 18.6"w x 2" high
<b>13</b> MKNFITRA198	2	USDOT 1486168 Blue - 16.4"w x 1.7"h

# Kit Number


## MKNFITRA105VNL6700

NFI Transportation  
White Sleeper Cab Kit  
NO Airshield window Parts  
Updated 2-27-2025

- 1 MKNFITRA025 - Breakdown Support Decal  
3.75" wide by 2.75" high  
Blue on white square cut  
Place in dash



- 2 MKNFITRA026 - DOT Inspection Decal  
3.5" wide by 5" high  
Place on drivers wing window facing outside  
Date changes yearly

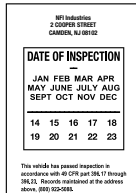

- 3 MKNFITRA090 - Tractor Door Logo  
23.5" wide by 9.6" high  
Red and Blue on reflective diecut



- 4 MKNFITRA114 - Airshield Logo  
47" wide by 18" high  
Red and Blue on reflective diecut



- 5 MKNFITRA113  
Watch Your Step  
3 points of contact decal  
6" wide by 1.375" high  
Red and blue on white square cut

**WATCH YOUR STEP**  
**USE 3-POINTS**  
**OF CONTACT**

- 6 MKNFITRA131 - UNIT NUMBER  
5" Blue 6 digit Unit #'s  
Blue diecut **0123456789**

- 7 MKNFITRA148 - NFI Cares  
7" wide by 2" high  
Blue and red on white  
Square cut Place on the dashboard



- 8 MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Green on white square cut  
See placement instruction sheet



- 9 MKNFITRA174 - Driver Reminder  
3" wide by 3" high  
Place on back of visor inside cab  
Black on white square cut



- 10 MKNFITRA015 - White reflective 2" X 25' Roll

- 11 MKNFITRA181 - Electronic log decal  
8" wide by 2.5" high  
Blue on white square cut

**DRIVER USING**  
**ELECTRONIC LOGS**

- 12 MKNFITRA197 - NFI TRANSPORTATION  
18.6" wide by 2" high  
Blue

**NFI Transportation**

- 13 MKNFITRA198 - USDOT 1486168  
16.4" wide by 1.7" high  
Blue

**USDOT 1486168**

**vernon**  
graphics | promotions

# Kit Number

## MKNFITRA126

### NFI Transportation

### Blue Day Cab Kit

### Updated 10-26-2023

- 1** MKNFITRA025 - Breakdown Support Decal  
3.75" wide by 2.75" high  
Placement in dash  
shown at 50%



- 2** MKNFITRA026 -  
DOT Inspection/Expiration Decal  
3.5" wide by 5" high  
Place on drivers wing  
window facing outside



- 4** MKNFITRA113  
Watch your step Decal  
6" wide by 1.375" high



- 9** MKNFITRA174 -  
Driver Reminder  
3" wide by 3" high  
Place on the back of the  
visor inside cab



- 12** MKNFITRA199 -  
NFI Transportation White  
18.6" wide by 2" high  
NFI Transportation

- 5** MKNFITRA114  
Air Shield logo  
47" wide by 18" high

- 13** MKNFITRA200 -  
USDOT 1486168 White  
16.4" wide by 1.7" high  
USDOT 1486168

- 6** MKNFITRA094  
5" White 6 DIGIT UNIT #'S  
Note: place on back of cab below  
window

175130

- 10** MKNFITRA016  
Blue reflective stripe




- 7** MKNFITRA148 - NFI Cares Decal  
7" wide by 2" high  
Place on the dashboard



- 8** MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Placement instruction sheet attached



**vernon**  
graphics | promotions

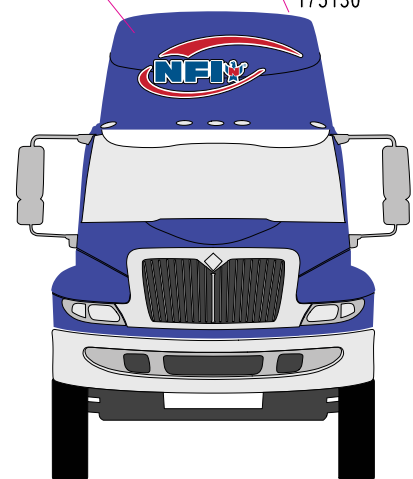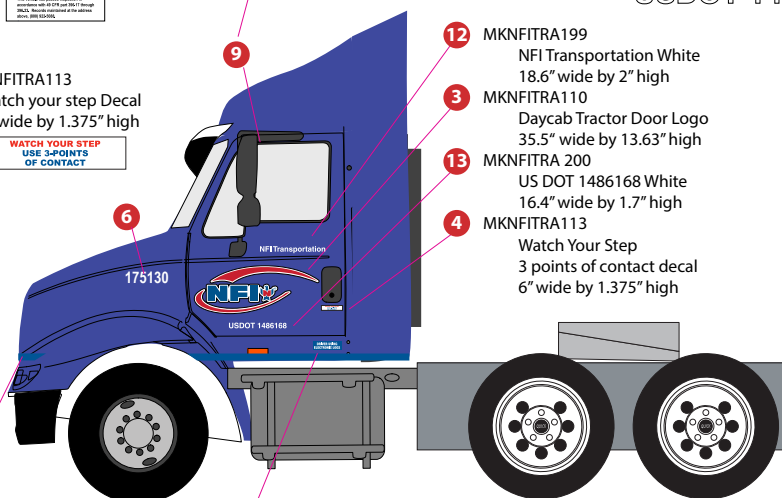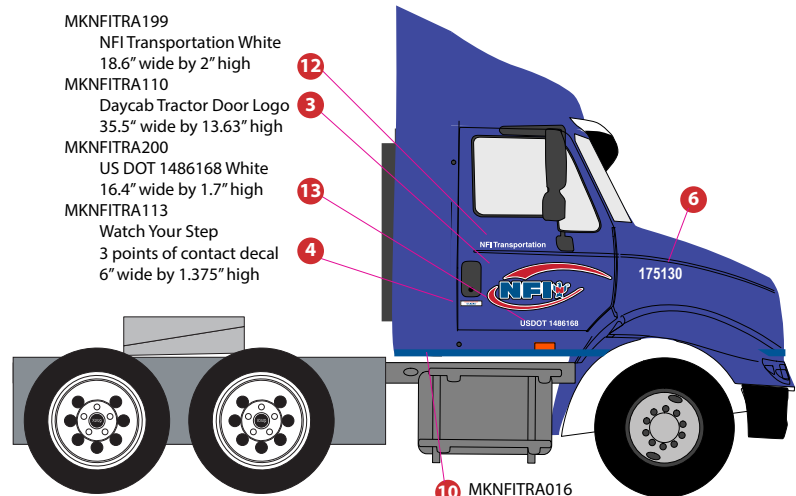

#### PART NUMBER QTY DESCRIPTION

<b>1</b>	MKNFITRA025	1	BREAKDOWN SUPPORT DECAL
<b>2</b>	MKNFITRA026	1	DOT INSPECTION DECAL
<b>3</b>	MKNFITRA110	2	DAYCAB DOOR LOGO
<b>4</b>	MKNFITRA113	2	WATCH YOUR STEP 3-POINTS
<b>5</b>	MKNFITRA114	1	AIR SHIELD LOGO
<b>6</b>	MKNFITRA094	3	5" White 6 DIGIT UNIT #'S
<b>7</b>	MKNFITRA148	1	NFI CARES
<b>8</b>	MKNFITRA164	1	TIRE CHECK REMINDER
<b>9</b>	MKNFITRA174	1	DRIVER REMINDER (FOR VISOR)
<b>10</b>	MKNFITRA016	1	BLUE REFLECTIVE 2" X 25' ROLL
<b>11</b>	MKNFITRA181	1	ELECTRONIC LOG
<b>12</b>	MKNFITRA199	2	NFI TRANSPORTATION White - 18.6" w x 2" high
<b>13</b>	MKNFITRA200	2	USDOT 1486168 White - 16.4" w x 1.7" high

# Kit Number MKNFITRA126

NFI Transportation  
Blue Day Cab Kit Parts  
Updated 10-26-2023

- 1 MKNFITRA025 - Breakdown Support Decal  
3.75" wide by 2.75" high  
Blue on white square cut  
Place in dash



- 2 MKNFITRA026 - DOT Inspection Decal  
3.5" wide by 5" high  
Place on drivers wing window facing outside  
Dates change yearly



- 3 MKNFITRA110 - Tractor Door Logo  
35.5" wide by 13.63" high  
Red and Blue on reflective diecut



- 4 MKNFITRA113  
Watch Your Step  
3 points of contact decal  
6" wide by 1.375" high  
Red and blue on white square cut



- 5 MKNFITRA114 - Air Shield Logo  
47" wide by 18" high  
Red and Blue, Diecut on reflective material



- 6 MKNFITRA094 - UNIT NUMBER  
5" Blue 6 digit Unit #'s  
White diecut

0123456789

- 7 MKNFITRA148 - NFI Cares  
7" wide by 2" high  
Blue and red on white  
Square cut Place on the dashboard



- 8 MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Green on white square cut  
See placement instruction sheet



- 9 MKNFITRA174 - Driver Reminder  
3" wide by 3" high  
Place on back of visor inside cab  
Black on white square cut



- 10 MKNFITRA016 - Bluer effective 2" X 25' Roll

- 11 MKNFITRA181 - Electronic log decal  
8" wide by 2.5" high  
Blue on white square cut



- 12 MKNFITRA199 - NFI TRANSPORTATION  
18.6" wide by 2" high  
White

NFI Transportation

- 13 MKNFITRA200 - USDOT 1486168  
16.4" wide by 1.7" high  
White

USDOT 1486168

# Kit Number MKNFITRA126A National Distribution Center Blue Day Cab Kit 10-27-2023

- 1 MKNFITRA025 - Breakdown Support Decal  
3.75" wide by 2.75" high  
Placement in dash  
shown at 50%




- 2 MKNFITRA026 -  
DOT Inspection/Exp Decal  
3.5" wide by 5" high  
Place on drivers wing  
window facing outside



- 9 MKNFITRA174 -  
Driver Reminder  
3" wide by 3" high  
Place on the back of  
the visor inside cab



- 7 MKNFITRA148 - NFI Cares Decal  
7" wide by 2" high  
Place on the dashboard

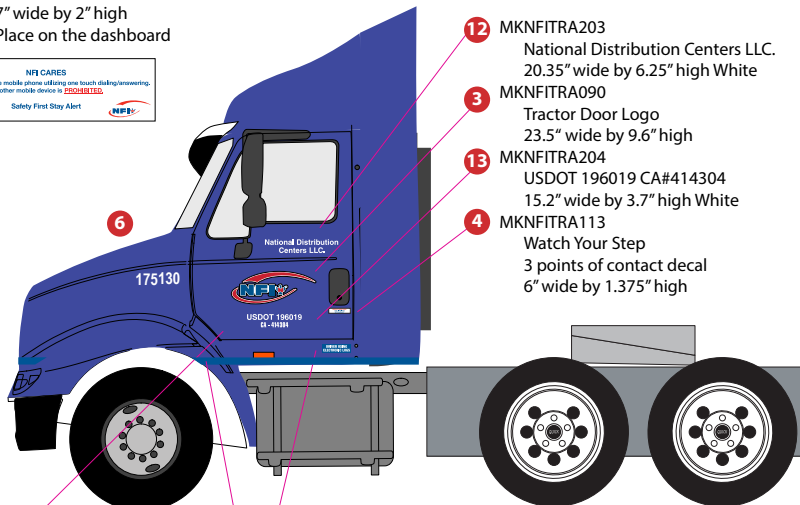

- 8 MKNFITRA164 -  
Tire Check Reminder  
2.75" wide by 1.75" high  
Placement instruction  
sheet attached




- 10 MKNFITRA181  
Electronic Logs  
8" wide by 2.5" high



- 11 MKNFITRA016  
White reflective stripe

- MKNFITRA203  
National Distribution Centers LLC.  
20.35" wide by 3.8" high White  
MKNFITRA090  
Tractor Door Logo  
23.5" wide by 9.6" high  
MKNFITRA204  
USDOT 196019 CA#414304  
15.3" wide by 3.7" high White  
MKNFITRA113  
Watch Your Step  
3 points of contact decal  
6" wide by 1.375" high

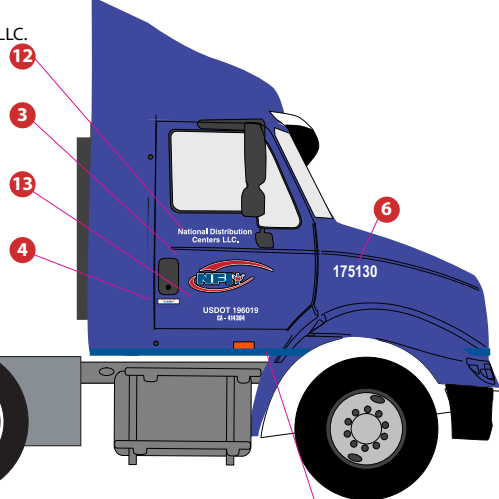


- 12 MKNFITRA203  
National Distribution Centers LLC.  
20.35" wide by 3.8" high Blue  
National Distribution  
Centers LLC.  
13 MKNFITRA204  
US DOT #196019 CA#414304  
15.2" wide by 3.7" high White  
USDOT 196019  
CA - 414304

- 11 MKNFITRA016  
White reflective stripe

- 5 MKNFITRA114  
Air Shield logo  
47" wide by 18" high

- 8 MKNFITRA094  
5" White 6 DIGIT UNIT #'S  
Note: place on back of cab  
below window

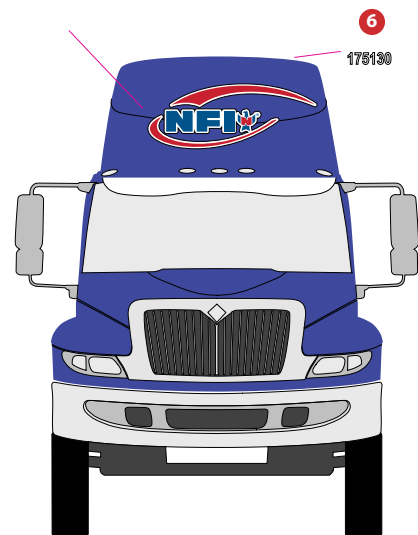

20% scale

## PART NUMBER QTY DESCRIPTION

1	MKNFITRA025	1	BREAKDOWN SUPPORT DECAL
2	MKNFITRA026	1	DOT INSPECTION DECAL
3	MKNFITRA090	2	TRACTOR DOOR LOGO
4	MKNFITRA113	2	WATCH YOUR STEP 3-POINTS
5	MKNFITRA114	1	AIR SHIELD LOGO
6	MKNFITRA094	3	5" WHITE 6 DIGIT UNIT #'S
7	MKNFITRA148	1	NFI CARES
8	MKNFITRA164	1	TIRE CHECK REMINDER
9	MKNFITRA174	1	DRIVER REMINDER (FOR VISOR)
10	MKNFITRA181	1	ELECTRONIC LOG DECAL
11	MKNFITRA016	1	BLUE REFLECTIVE 2" X 25' ROLL
12	MKNFITRA203	2	NATIONAL DISTRIBUTION.... White
13	MKNFITRA204	2	USDOT 196019 CA-414304 White

**vernon**  
graphics | promotions




# Kit Number MKNFITRA126A National Distribution Centers Blue Day Cab Parts

Updated 10-27-2023

- 1** MKNFITRA025 - Breakdown Support Decal  
3.75" wide by 2.75" high  
Blue on white square cut  
Place in dash



- 2** MKNFITRA026 - DOT Inspection Decal  
3.5" wide by 5" high  
Place on drivers wing window facing outside  
Dates change yearly

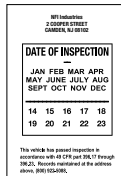

- 3** MKNFITRA090 - Tractor Door Logo  
23.5" wide by 9.6" high  
Red and Blue on reflective diecut



- 4** MKNFITRA113  
Watch Your Step  
3 points of contact decal  
6" wide by 1.375" high  
Red and blue on white square cut



- 5** MKNFITRA114 - Air Shield Logo  
47" wide by 18" high  
Red and Blue, Diecut on reflective material



- 6** MKNFITRA094 - UNIT NUMBER  
5" White 6 digit Unit #'s  
White diecut

0123456789

- 7** MKNFITRA148 - NFI Cares  
7" wide by 2" high  
Blue and red on white  
Square cut Place on the dashboard



- 8** MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Green on white square cut  
See placement instruction sheet



- 9** MKNFITRA174 - Driver Reminder  
3" wide by 3" high  
Place on back of visor inside cab  
Black on white square cut



- 10** MKNFITRA181 - Electronic log decal  
8" wide by 2.5" high  
Blue on white square cut



- 11** MKNFITRA016 - Blue reflective 2" X 25' Roll

- 12** MKNFITRA203 - National Distribution Centers LLC.  
20.35" wide by 6.25" high White

National Distribution  
Centers LLC.

- 13** MKNFITRA204 - USDOT #196019 CA-414304  
15.9" wide by 3.6" high White

USDOT 196019  
CA - 414304

# Kit Number MKNFITRA126ZE NFI Transportation Zero Emissions Blue Day Cab Kit 7-1-2024 • pz

- 1 MKNFITRA025 - Breakdown Support Decal  
3.75" wide by 2.75" high  
Placement in dash  
shown at 50%



- 2 MKNFITRA026 -  
DOT Inspection/Expiration Decal  
3.5" wide by 3" high  
Place on drivers wing  
window facing outside



- 4 MKNFITRA113  
Watch your step Decal  
6" wide by 1.375" high



- 10 MKNFITRA016  
Blue reflective stripe


- 7 MKNFITRA148 - NFI Cares Decal  
7" wide by 2" high  
Place on the dashboard



- 8 MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Placement instruction sheet attached



- MKNFITRA199  
NFI Transportation White  
18.6" wide by 2" high  
MKNFITRA090  
Tractor Door Logo  
23.5" wide by 9.6" high  
MKNFITRA200  
US DOT 1486168 White  
16.4" wide by 1.7" high  
MKNFITRA113  
Watch Your Step  
3 points of contact decal  
6" wide by 1.375" high  
MKNFITRA193  
Zero Emissions  
23.5" wide by 1.9" high white

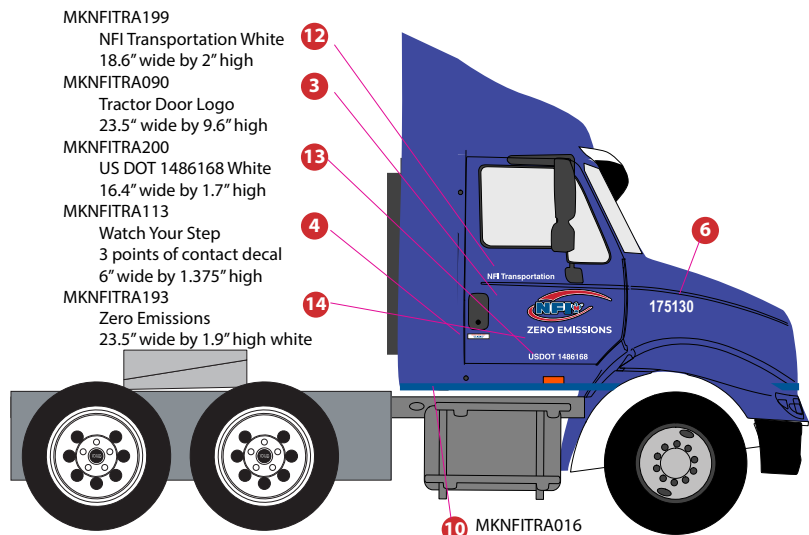

- 10 MKNFITRA016  
Blue reflective stripe

- 9 MKNFITRA174 -  
Driver Reminder  
3" wide by 3" high  
Place on the back of  
the visor inside cab





- 12 MKNFITRA199 -  
NFI Transportation White  
18.6" wide by 2" high  
NFI Transportation

- 5 MKNFITRA114  
Air Shield logo  
47" wide by 18" high

- 13 MKNFITRA200 -  
USDOT 1486168 White  
16.4" wide by 1.7" high  
USDOT 1486168

- 6 MKNFITRA094  
5" White 6 DIGIT UNIT #S  
Note: place on back of cab below  
window

- 15 MKNFITRA194  
Zero Emissions  
For Air Shield  
47" wide by 3.75" high  
White

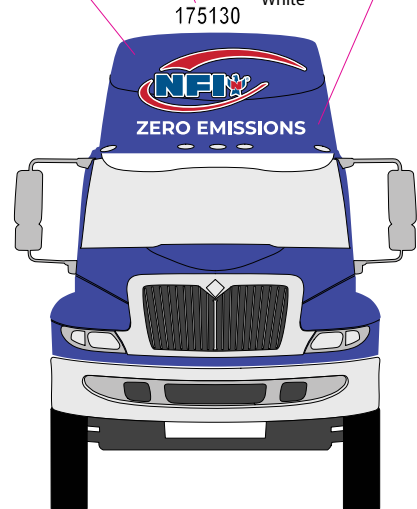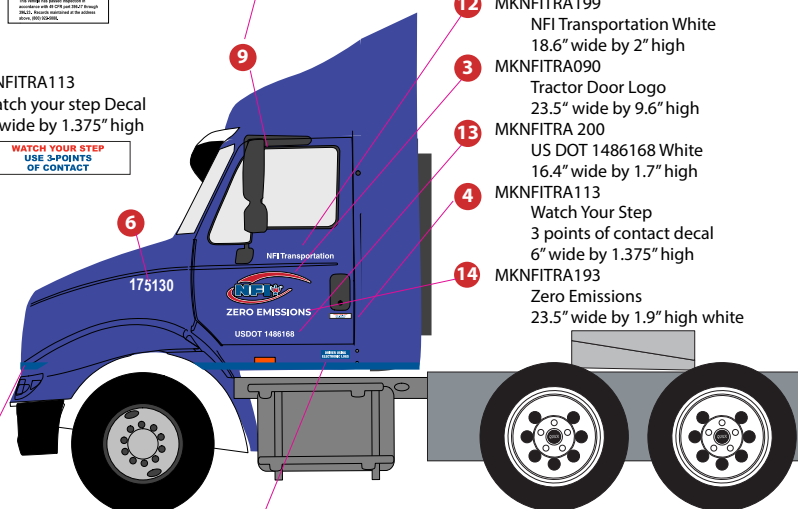

## PART NUMBER QTY DESCRIPTION

1	MKNFITRA025	1	BREAKDOWN SUPPORT DECAL
2	MKNFITRA026	1	DOT INSPECTION DECAL
3	MKNFITRA090	2	TRACTOR DOOR LOGO
4	MKNFITRA113	2	WATCH YOUR STEP 3-POINTS
5	MKNFITRA114	1	AIR SHIELD LOGO
6	MKNFITRA094	3	5" White 6 DIGIT UNIT #S
7	MKNFITRA148	1	NFI CARES
8	MKNFITRA164	1	TIRE CHECK REMINDER
9	MKNFITRA174	1	DRIVER REMINDER (FOR VISOR)
10	MKNFITRA016	1	BLUE REFLECTIVE 2" X 25' ROLL
11	MKNFITRA181	1	ELECTRONIC LOG
12	MKNFITRA199	2	NFI TRANSPORTATION WHITE
13	MKNFITRA200	2	USDOT 1486168 WHITE
14	MKNFITRA193	2	ZERO EMISSIONS CAB WHITE
15	MKNFITRA194	1	ZERO EMISSIONS AIRSHIELD WHITE

**vernon**  
graphics | promotions

# Kit Number

## MKNFITRA126ZE

### NFI Transportation Zero Emissions


### Blue Day Cab Kit Parts

Updated 7-10-2024

- 1** MKNFITRA025 - Breakdown Support Decal  
3.75" wide by 2.75" high  
Blue on white square cut  
Place in dash



- 2** MKNFITRA026 - DOT Inspection Decal  
3.5" wide by 5" high  
Place on drivers  
wing window  
facing outside  
Dates change yearly

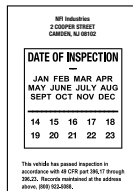

- 3** MKNFITRA090 - Tractor Door Logo  
23.5" wide by 9.6" high  
Red and Blue on reflective diecut



- 4** MKNFITRA113  
Watch Your Step  
3 points of contact decal  
6" wide by 1.375" high  
Red and blue on white square cut



- 5** MKNFITRA114 - Air Shield Logo  
47" wide by 18" high  
Red and Blue, Diecut on reflective material



- 6** MKNFITRA094 - UNIT NUMBER  
5" Blue 6 digit Unit #'s  
White diecut

0123456789

- 7** MKNFITRA148 - NFI Cares  
7" wide by 2" high  
Blue and red on white  
Square cut Place on the dashboard



- 8** MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Green on white square cut  
See placement instruction sheet



- 9** MKNFITRA174 - Driver Reminder  
3" wide by 3" high  
Place on back of visor inside cab  
Black on white square cut



- 10** MKNFITRA016 - Bluer effective 2" X 25' Roll

- 11** MKNFITRA181 - Electronic log decal  
8" wide by 2.5" high  
Blue on white square cut



- 12** MKNFITRA199 - NFI TRANSPORTATION  
18.6" wide by 2" high  
White

NFI Transportation

- 13** MKNFITRA200 - USDOT 1486168  
16.4" wide by 1.7" high  
White

USDOT 1486168

- 14** MKNFITRA193 - Zero Emission Cab White  
23.5" wide by 1.9" high  
White


ZERO EMISSIONS

- 15** MKNFITRA194 - Zero Emission Airshield White  
47" wide by 3.75" high  
White

ZERO EMISSIONS

**vernon**  
graphics | promotions


# Kit Number MKNFITRA130 NFI Transportation White Day Cab Kit Updated 10-27-2023

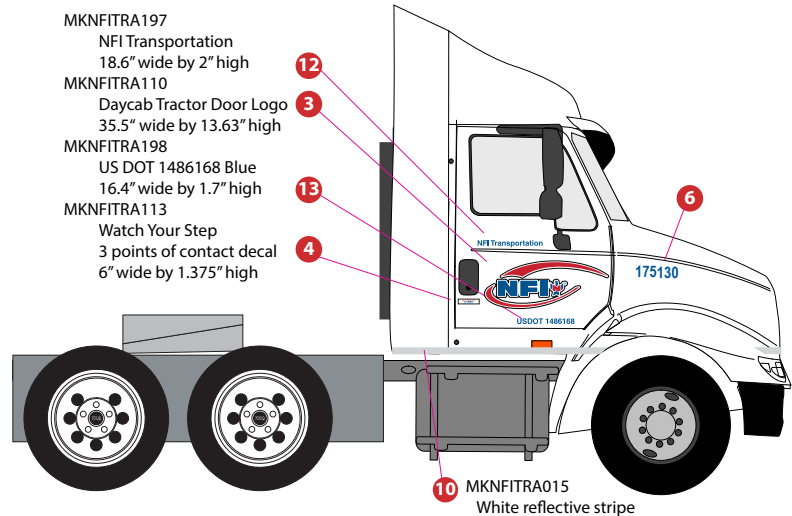

- 1 MKNFITRA025 - Breakdown Support Decal  
3.75" wide by 2.75" high  
Placement in dash  
shown at 50%



- 2 MKNFITRA026 -  
DOT Inspection/Expiration Decal  
3.5" wide by 5" high  
Place on drivers wing  
window facing outside



- 9 MKNFITRA174 -  
Driver Reminder  
3" wide by 3" high  
Place on the back of the  
visor inside cab




- 5 MKNFITRA114  
Air Shield logo  
47" wide by 18" high

- 6 MKNFITRA131  
5" Blue 6 DIGIT UNIT #'S  
Note: place on back of cab below  
window

- 12 MKNFITRA197 -  
NFI Transportation Blue  
18.6" wide by 2" high

- 13 MKNFITRA198 -  
USDOT #1486168 Blue  
16.4" wide by 1.7" high

- 4 MKNFITRA113  
Watch your step Decal  
6" wide by 1.375" high

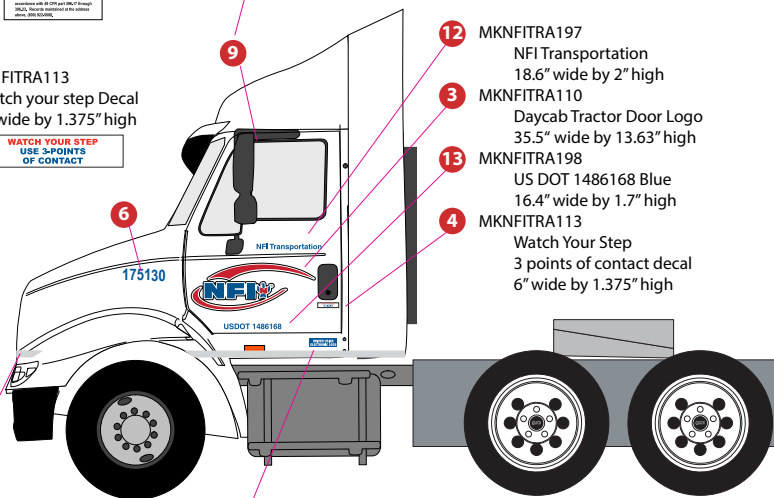

- 10 MKNFITRA015  
White reflective stripe


- 11 MKNFITRA181 Electronic Logs  
8" wide by 2.5" high



- 7 MKNFITRA148 - NFI Cares Decal  
7" wide by 2" high  
Place on the dashboard



- 8 MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Placement instruction sheet attached

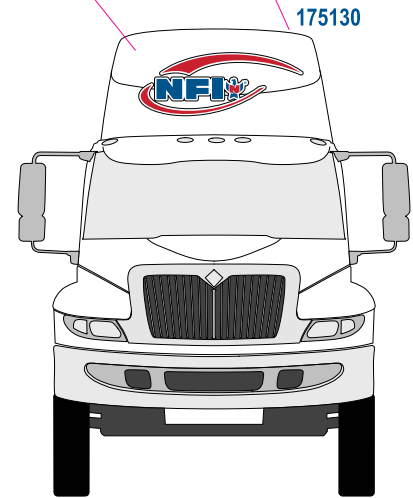

## PART NUMBER QTY DESCRIPTION

1	MKNFITRA025	1	BREAKDOWN SUPPORT DECAL
2	MKNFITRA026	1	DOT INSPECTION DECAL
3	MKNFITRA110	2	DAYCAB DOOR LOGO
4	MKNFITRA113	2	WATCH YOUR STEP 3-POINTS
5	MKNFITRA114	1	AIR SHIELD LOGO
6	MKNFITRA131	3	5" BLUE 6 DIGIT UNIT #'S
7	MKNFITRA148	1	NFI CARES
8	MKNFITRA164	1	TIRE CHECK REMINDER
9	MKNFITRA174	1	DRIVER REMINDER (FOR VISOR)
10	MKNFITRA015	1	WHITE REFLECTIVE 2" X 25" ROLL
11	MKNFITRA181	1	ELECTRONIC LOG
12	MKNFITRA197	2	NFI TRANSPORTATION Blue - 18.6" w x 2" high
13	MKNFITRA198	2	USDOT 1486168 Blue - 16.4" w x 1.7" high

**vernon**  
graphics | promotions

# Kit Number

## MKNFITRA130

### NFI Transportation


### White Day Cab Kit Parts

Updated 10-27-2023

- 1** MKNFITRA025 - Breakdown Support Decal  
3.75" wide by 2.75" high  
Blue on white square cut  
Place in dash



- 2** MKNFITRA026 - DOT Inspection Decal  
3.5" wide by 5" high  
Place on drivers wing window facing outside  
Dates change yearly

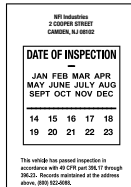

- 3** MKNFITRA110 - Tractor Door Logo  
35.5" wide by 13.63" high  
Red and Blue on reflective diecut



- 4** MKNFITRA113  
Watch Your Step  
3 points of contact decal  
6" wide by 1.375" high  
Red and blue on white square cut



- 5** MKNFITRA114 - Air Shield Logo  
47" wide by 18" high  
Red and Blue, Diecut on reflective material



- 6** MKNFITRA131 - UNIT NUMBER  
5" Blue 6 digit Unit #'s  
Blue diecut

**0123456789**

- 7** MKNFITRA148 - NFI Cares  
7" wide by 2" high  
Blue and red on white  
Square cut Place on the dashboard



- 8** MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Green on white square cut  
See placement instruction sheet



- 9** MKNFITRA174 - Driver Reminder  
3" wide by 3" high  
Place on back of visor inside cab  
Black on white square cut



- 10** MKNFITRA015 - White reflective 2" X 25' Roll

- 11** MKNFITRA181 - Electronic log decal  
8" wide by 2.5" high  
Blue on white square cut



- 12** MKNFITRA197 - NFI TRANSPORTATION  
18.6" wide by 2" high  
Blue

**NFI Transportation**

- 13** MKNFITRA198 - USDOT #1486168  
16.7" wide by 1.7" high  
Blue

**USDOT 1486168**



# Kit Number

## MKNFITRA130A

### National Distribution Center

### White Day Cab Kit

### 10-27-2023

- 1 MKNFITRA025 - Breakdown Support Decal  
3.75" wide by 2.75" high  
Placement in dash  
shown at 50%




- 2 MKNFITRA026 -  
DOT Inspection/Exp Decal  
3.5" wide by 5" high  
Place on drivers wing  
window facing outside



- 9 MKNFITRA174 -  
Driver Reminder  
3" wide by 3" high  
Place on the back of  
the visor inside cab



- 7 MKNFITRA148 - NFI Cares Decal  
7" wide by 2" high  
Place on the dashboard

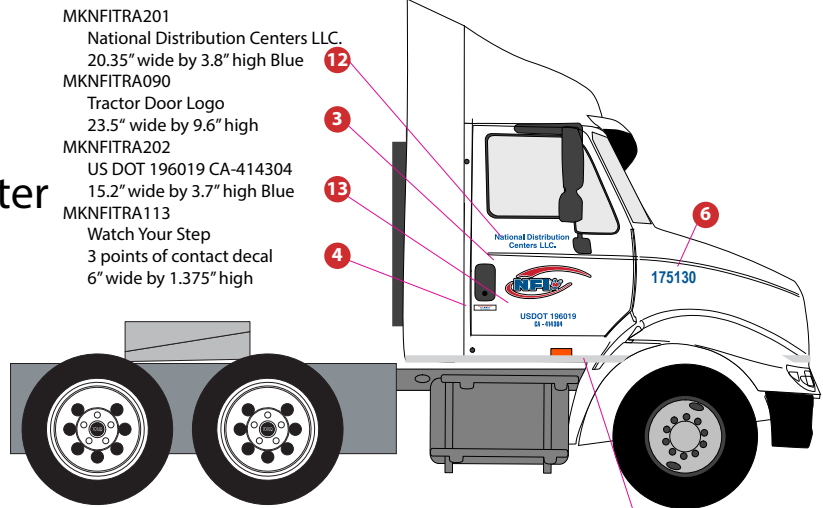


- 12 MKNFITRA201  
National Distribution Centers LLC.  
20.35" wide by 3.8" high Blue  
National Distribution  
Centers LLC.

- 13 MKNFITRA202  
US DOT 196019 CA-414304  
15.2" wide by 3.7" high Blue  
USDOT 196019  
CA - 414304

- 11 MKNFITRA015  
White reflective stripe

- 5 MKNFITRA114  
Air Shield logo  
47" wide by 18" high

- 8 MKNFITRA131  
5" Blue 6 DIGIT UNIT #'S  
Note: place on back of cab  
below window

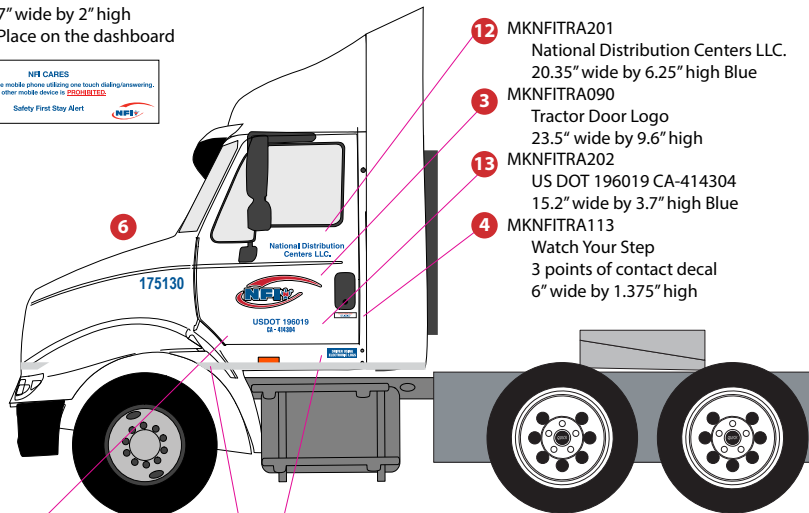


- 8 MKNFITRA164 -  
Tire Check Reminder  
2.75" wide by 1.75" high  
Placement instruction  
sheet attached



- 10 MKNFITRA181  
Electronic Logs  
8" wide by 2.5" high



- 11 MKNFITRA015  
White reflective stripe

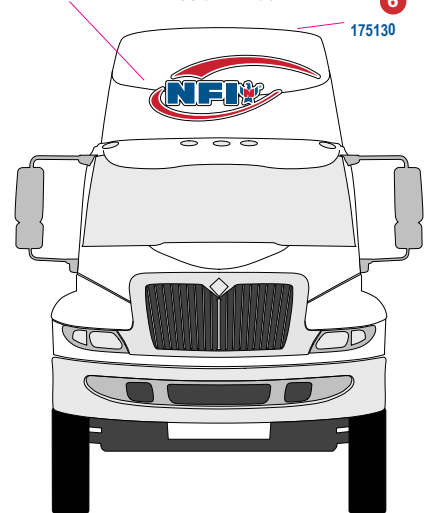

20% scale

PART NUMBER	QTY	DESCRIPTION
1 MKNFITRA025	1	BREAKDOWN SUPPORT DECAL
2 MKNFITRA026	1	DOT INSPECTION DECAL
3 MKNFITRA090	2	TRACTOR DOOR LOGO
4 MKNFITRA113	2	WATCH YOUR STEP 3-POINTS
5 MKNFITRA114	1	AIR SHIELD LOGO
6 MKNFITRA131	3	5" WHITE 6 DIGIT UNIT #'S
7 MKNFITRA148	1	NFI CARES
8 MKNFITRA164	1	TIRE CHECK REMINDER
9 MKNFITRA174	1	DRIVER REMINDER (FOR VISOR)
10 MKNFITRA181	1	ELECTRONIC LOG DECAL
11 MKNFITRA015	1	WHITE REFLECTIVE 2" X 25' ROLL
12 MKNFITRA201	2	NATIONAL DISTRIBUTION...
13 MKNFITRA202	2	USDOT 196019 CA-414304




# Kit Number MKNFITRA130A National Distribution Centers White Day Cab Parts

Updated 10-27-2023

- 1** MKNFITRA025 - Breakdown Support Decal  
3.75" wide by 2.75" high  
Blue on white square cut  
Place in dash



- 2** MKNFITRA026 - DOT Inspection Decal  
3.5" wide by 5" high  
Place on drivers wing window facing outside  
Dates change yearly

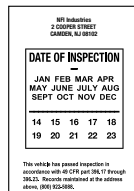

- 3** MKNFITRA090 - Tractor Door Logo  
23.5" wide by 9.6" high  
Red and Blue on reflective diecut



- 4** MKNFITRA113  
Watch Your Step  
3 points of contact decal  
6" wide by 1.375" high  
Red and blue on white square cut



- 5** MKNFITRA114 - Air Shield Logo  
47" wide by 18" high  
Red and Blue, Diecut on reflective material



- 6** MKNFITRA131 - UNIT NUMBER  
5" Blue 6 digit Unit #'s  
Blue diecut

**0123456789**

- 7** MKNFITRA148 - NFI Cares  
7" wide by 2" high  
Blue and red on white  
Square cut Place on the dashboard



- 8** MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Green on white square cut  
See placement instruction sheet



- 9** MKNFITRA174 - Driver Reminder  
3" wide by 3" high  
Place on back of visor inside cab  
Black on white square cut



- 10** MKNFITRA181 - Electronic log decal  
8" wide by 2.5" high  
Blue on white square cut



- 11** MKNFITRA015 - White reflective 2" X 25' Roll

- 12** MKNFITRA201 - National Distribution Centers LLC.  
20.35" wide by 6.25" high Blue

**National Distribution  
Centers LLC.**

- 13** MKNFITRA202 - USDOT 196019 CA-414304  
16.2" wide by 2.7" high Blue

**USDOT 196019  
CA - 414304**

**vernon**  
graphics | promotions

# MKNFITRA142

## NFI Transportation

### On-Road Yard Truck

#### Updated 10-27-2023


- 2** MKNFITRA113 - Watch your step  
6" wide by 1.375" high  
Place on the dashboard

**WATCH YOUR STEP**  
**USE 3-POINTS**  
**OF CONTACT**

- 4** MKNFITRA148 - NFI Cares Decal  
7" wide by 2" high  
Place on the dashboard



- 3** MKNFITRA131  
5" Blue 6 DIGIT UNIT #'S  
Note: place on back of cab

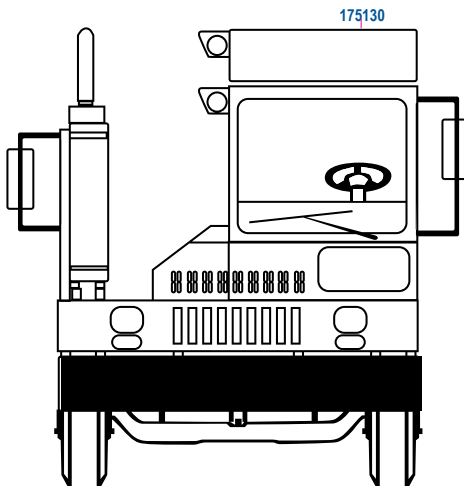


- 5** MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Placement instruction sheet attached




**vernon**  
graphics | promotions

MKNFITRA135  
NFI Transportation  
18.6" wide by 2" high  
MKNFITRA090  
Tractor Door Logo  
23.5" wide by 9.6" high  
MKNFITRA198  
USDOT 1486168  
16.4" wide by 1.7" high Blue Vinyl  
MKNFITRA113  
Watch your step 3 points of contact decal  
6" wide by 1.375" high

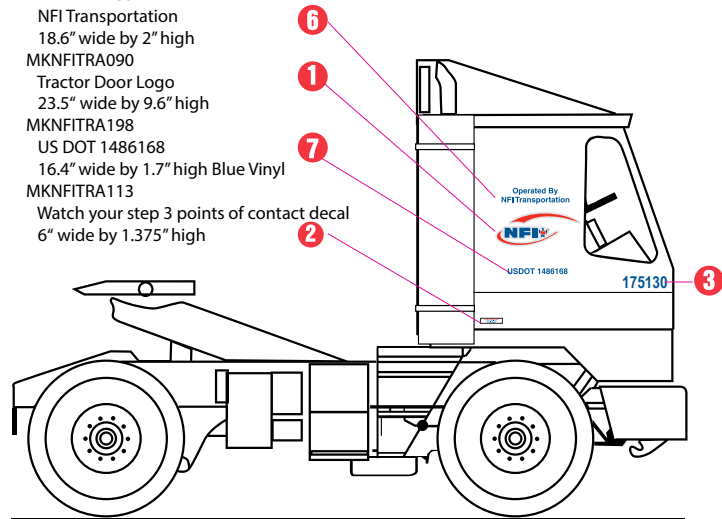

- 6** MKNFITRA197  
NFI Transportation  
18.6" wide by 2" high Blue  
**1** MKNFITRA090  
Tractor Door Logo  
23.5" wide by 9.6" high  
**7** MKNFITRA198  
USDOT 1486168  
17.3" wide by 1.7" high Blue Vinyl  
**2** MKNFITRA113  
Watch your step 3 points of contact decal  
6" wide by 1.375" high

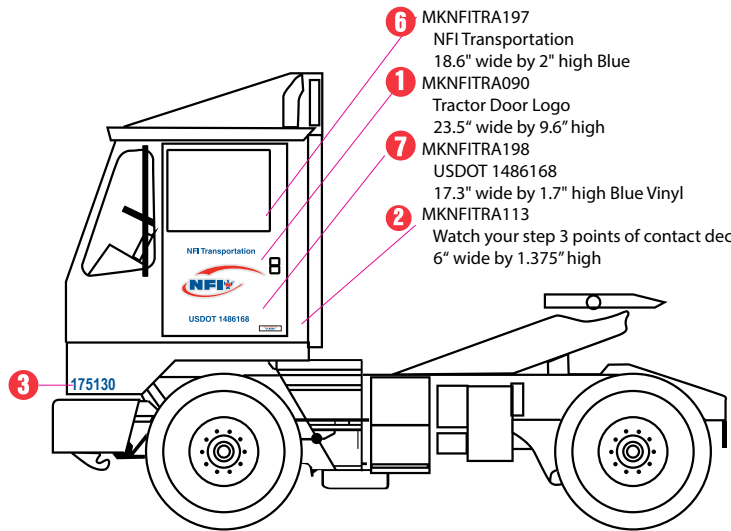

PART NUMBER	QTY	DESCRIPTION
<b>1</b> MKNFITRA090	2	TRACTOR DOOR LOGO
<b>2</b> MKNFITRA113	2	Watch your step 3 points
<b>3</b> MKNFITRA131	3	5" BLUE 6 DIGIT UNIT #'S
<b>4</b> MKNFITRA148	1	NFI CARES DECAL
<b>5</b> MKNFITRA164	1	TIRE CHECK DECAL
<b>6</b> MKNFITRA197	2	NFI TRANSP... Blue
<b>7</b> MKNFITRA198	2	USDOT 1486168 BLUE

**vernon**  
graphics | promotions

# MKNFITRA143

## NFI Transportation

### Off-Road Yard Truck

#### Updated 7-31-2023

- 2** MKNFITRA113 - Watch your step  
6" wide by 1.375" high  
Place on the dashboard

**WATCH YOUR STEP**  
**USE 3-POINTS**  
**OF CONTACT**


- 4** MKNFITRA148 - NFI Cares Decal  
7" wide by 2" high  
Place on the dashboard



- 5** MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Placement instruction sheet attached





- 3** MKNFITRA131  
5" Blue 6 DIGIT UNIT #'S  
Note: place on back of cab

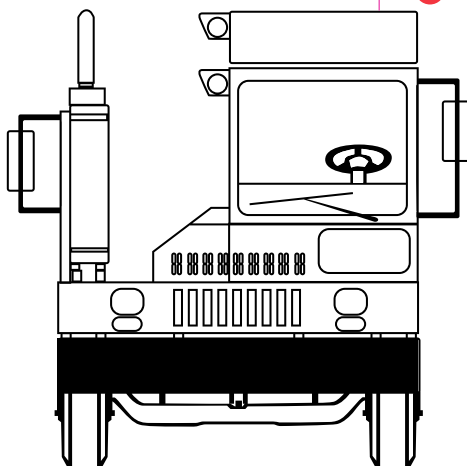

**vernon**  
graphics | promotions

- MKNFITRA197  
NFI Transportation  
17.3" wide by 1.6" high high Blue  
MKNFITRA090  
Tractor Door Logo  
23.5" wide by 9.6" high  
MKNFITRA113  
Watch your step  
3 points of contact decal  
6" wide by 1.375" high

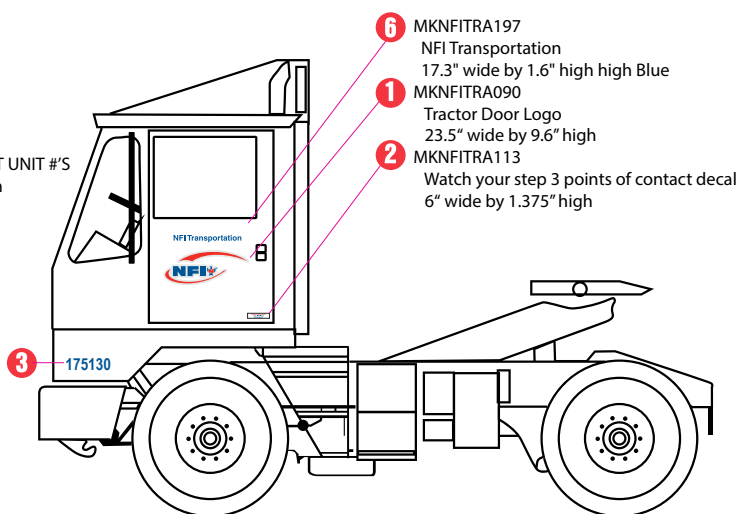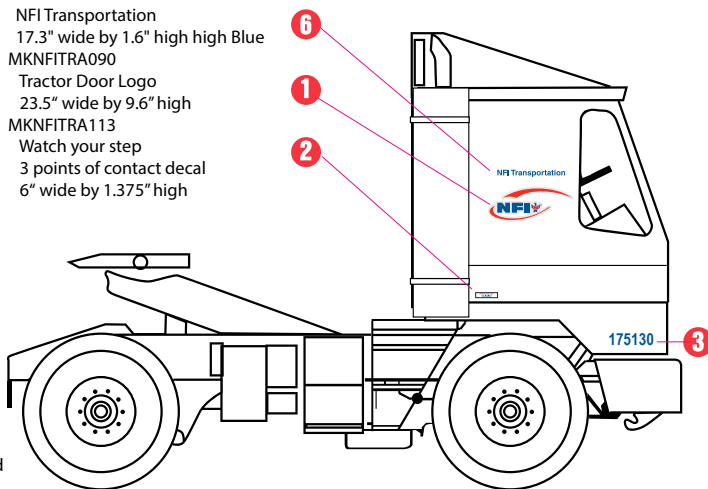

20% scale

PART NUMBER	QTY	DESCRIPTION
<b>1</b> MKNFITRA090	2	TRACTOR DOOR LOGO
<b>2</b> MKNFITRA113	2	Watch your step 3 points
<b>3</b> MKNFITRA131	3	5" BLUE 6 DIGIT UNIT #'S
<b>4</b> MKNFITRA148	1	NFI CARES DECAL
<b>5</b> MKNFITRA164	1	TIRE CHECK REMINDER
<b>6</b> MKNFITRA197	2	NFI TRANSP... Blue

**vernon**  
graphics | promotions

# MKNFITRA150

## National Distribution Center, LLC

### On-Road Yard Truck

#### Updated 10-27-2023

- 2** MKNFITRA113 - Watch your step  
6" wide by 1.375" high  
Place on the dashboard

**WATCH YOUR STEP  
USE 3-POINTS  
OF CONTACT**

- 4** MKNFITRA148 - NFI Cares Decal  
7" wide by 2" high  
Place on the dashboard


**NFI CARES**  
ONLY use hands free mobile phone utilizing one touch dialing/answering.  
Any other mobile device is **PROHIBITED**.  
Safety First Stay Alert

- 5** MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Placement instruction sheet attached



**Tire Check Reminder**  
NFI Standard  
Steer Tires = 110 psi  
Drive Tires = 100 psi  
Trailer Tires = 100 psi  
Check Air Pressure Daily  
Calibrate Gauge Monthly

- 6** National Distribution Centers, LLC

- 7** USDOT 196019  
CA - 414304

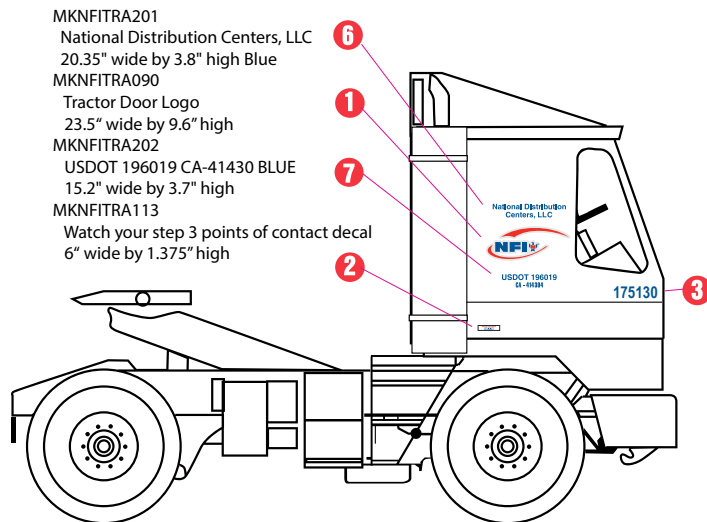

MKNFITRA131  
5" Blue 6 DIGIT UNIT #'S  
Note: place on back of cab

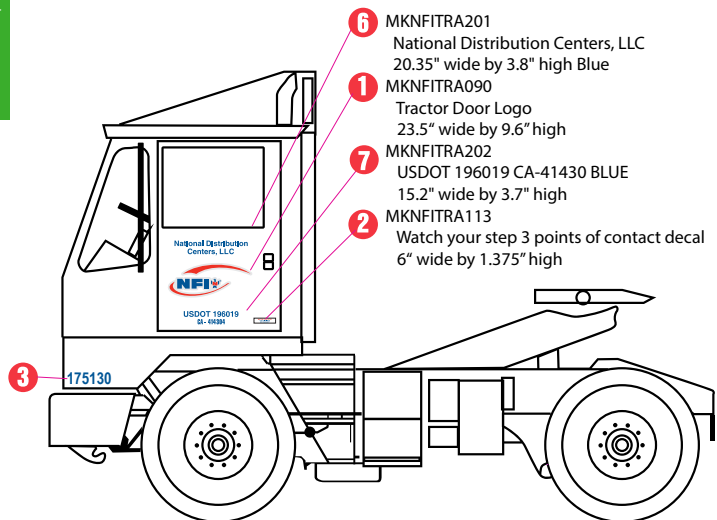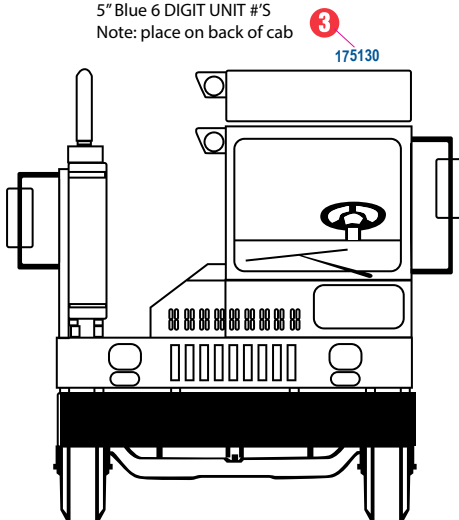

20% scale

**vernon**  
graphics | promotions

PART NUMBER	QTY	DESCRIPTION
<b>1</b> MKNFITRA090	2	DOOR LOGO
<b>2</b> MKNFITRA113	2	Watch your step 3 Points
<b>3</b> MKNFITRA131	3	5" BLUE 6 DIGIT UNIT #'S
<b>4</b> MKNFITRA148	1	NFI CARES DECAL
<b>5</b> MKNFITRA164	1	Tire Check Decal
<b>6</b> MKNFITRA201	2	National Dist.... Blue
<b>7</b> MKNFITRA202	2	USDOT 196019 Blue

**vernon**  
graphics | promotions

# MKNFITRA151

## National Distribution Center, L. P.

### Off-Road Yard Truck


#### Updated 8-9-2023

- 3** MKNFITRA113 - Watch your step  
6" wide by 1.375" high  
Place on the dashboard
- 6** MKNFITRA201 - Door information  
20.35" wide by 3.8" high


**WATCH YOUR STEP  
USE 3-POINTS  
OF CONTACT**

National Distribution  
Centers, L.P.

- 4** MKNFITRA148 - NFI Cares Decal  
7" wide by 2" high  
Place on the dashboard


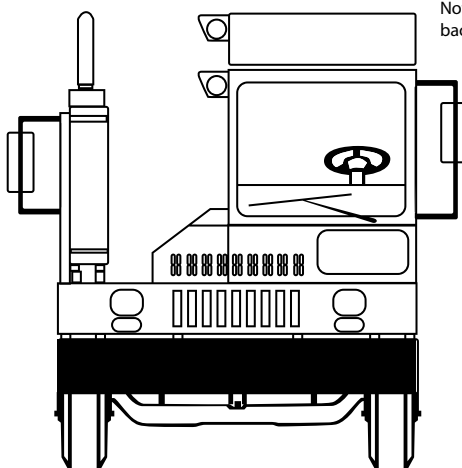


**vernon**  
graphics | promotions

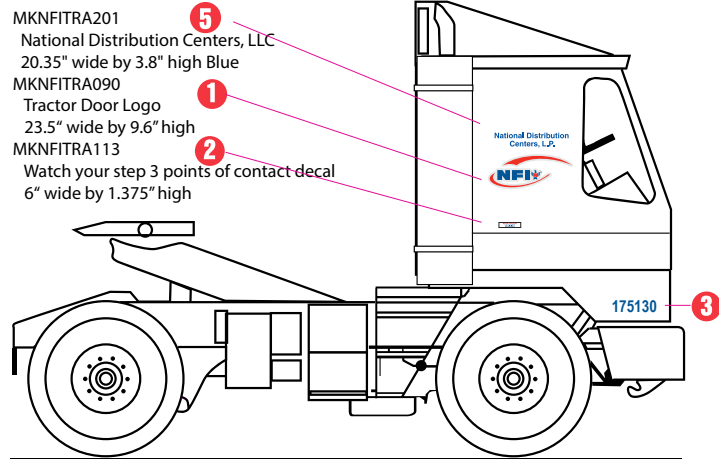

- 5** MKNFITRA201  
National Distribution Centers, LLC  
20.35" wide by 3.8" high Blue
- 1** MKNFITRA090  
Tractor Door Logo  
23.5" wide by 9.6" high
- 2** MKNFITRA113  
Watch your step 3 points of contact decal  
6" wide by 1.375" high

- 5** MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Placement instruction sheet attached

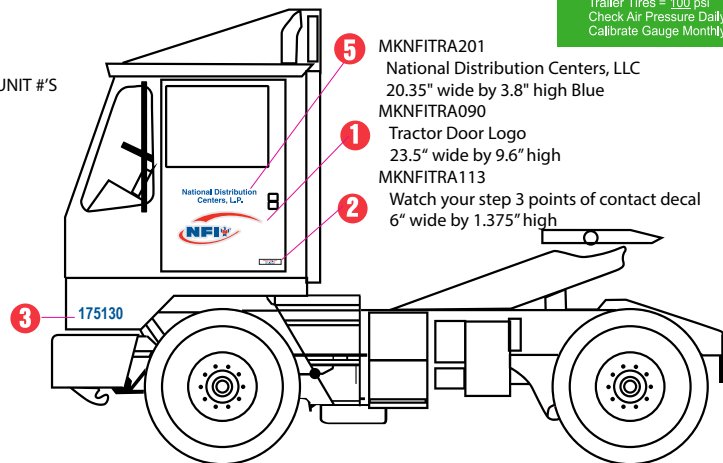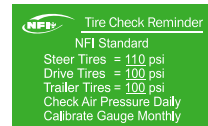

- 3** MKNFITRA131  
5" Blue 6 DIGIT UNIT #'S  
Note: place on back of cab
- 5** MKNFITRA201  
National Distribution Centers, LLC  
20.35" wide by 3.8" high Blue
- 1** MKNFITRA090  
Tractor Door Logo  
23.5" wide by 9.6" high
- 2** MKNFITRA113  
Watch your step 3 points of contact decal  
6" wide by 1.375" high



20% scale

PART NUMBER	QTY	DESCRIPTION
<b>1</b> MKNFITRA090	2	TRACTOR DOOR LOGO
<b>2</b> MKNFITRA113	2	Watch your step 3 Points
<b>3</b> MKNFITRA131	3	5" BLUE 6 DIGIT UNIT #'S
<b>4</b> MKNFITRA148	1	NFI CARES DECAL
<b>5</b> MKNFITRA164	1	TIRE CHECK REMINDER
<b>6</b> MKNFITRA201	2	Cab Information Blue

**vernon**  
graphics | promotions

# MKNFITRA162 Owner Operator Blue Cab Kit

Updated 10-26-2023

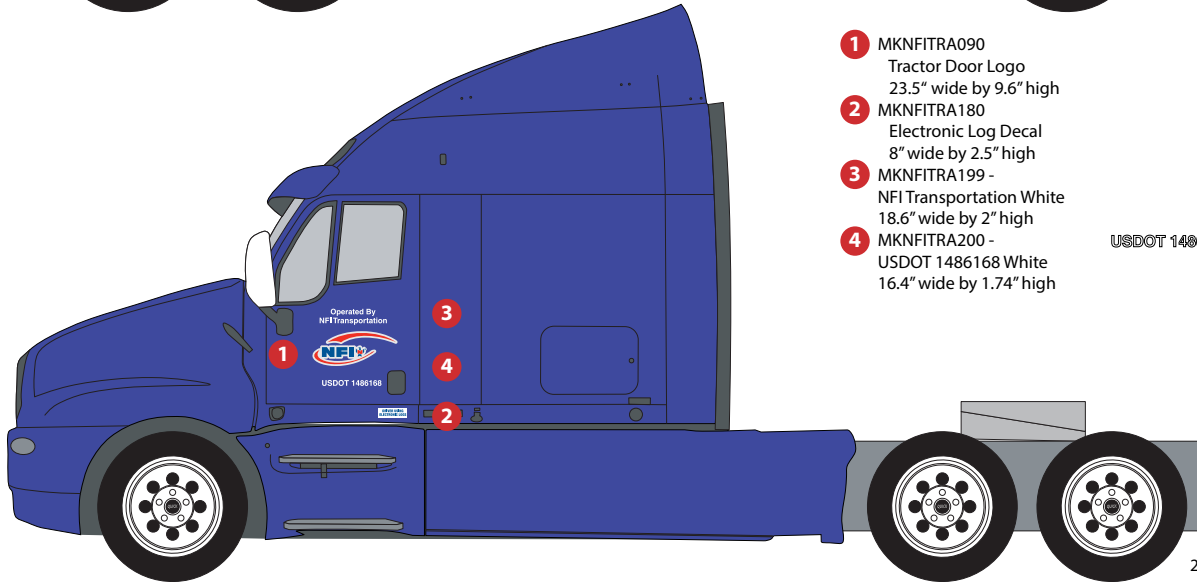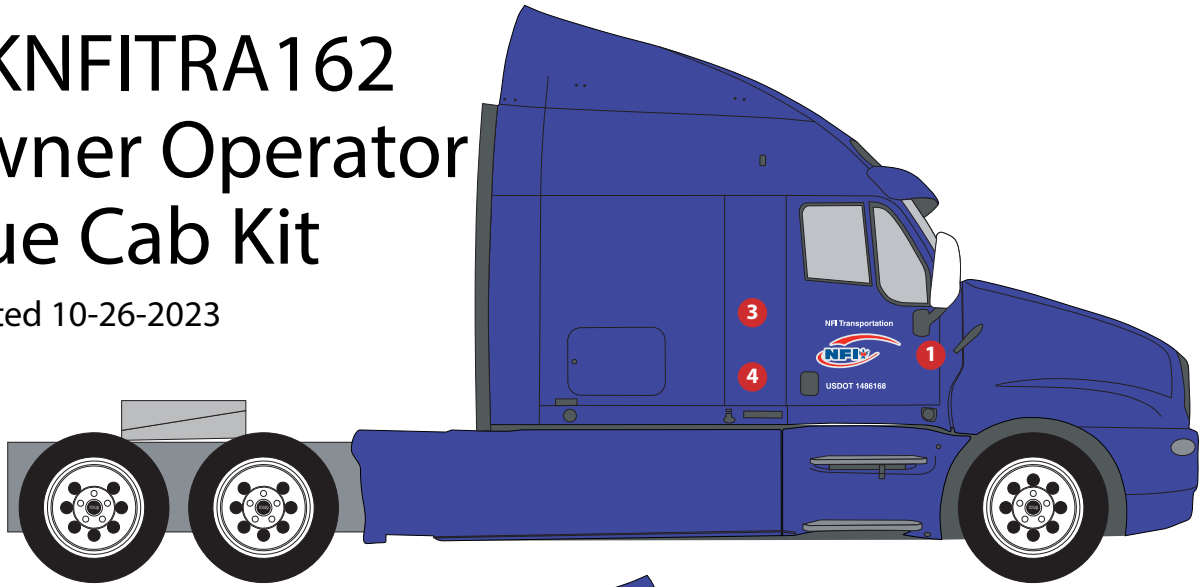

- 1 MKNFITRA090  
Tractor Door Logo  
23.5" wide by 9.6" high
- 2 MKNFITRA180  
Electronic Log Decal  
8" wide by 2.5" high
- 3 MKNFITRA199 -  
NFI Transportation White  
18.6" wide by 2" high
- 4 MKNFITRA200 -  
USDOT 1486168 White  
16.4" wide by 1.74" high

USDOT 1486168

20% scale

**vernon**  
graphics | promotions

PART NUMBER	QTY	DESCRIPTION
1 MKNFITRA090	2	Tractor DOOR LOGO
2 MKNFITRA180	1	Electronic Log decal
3 MKNFITRA199	2	NFI TRANSPORTATION White - 18.6"w x 2" high
4 MKNFITRA200	2	USDOT 1486168 White -16.4"w x 1.74"h

**vernon**  
graphics | promotions



# Kit Number

## MKNFITRA162

NFI Transportation  
Owner Operator  
Blue Cab Kit Parts  
Updated 10-26-2023

- 1** MKNFITRA090 - Tractor Door Logo  
23.5" wide by 9.6" high  
Blue and red on reflective  
diecut



- 2** MKNFITRA180 -  
Electronic Log Decal  
8" by 2.5" squarecut

**DRIVER USING  
ELECTRONIC LOGS**

- 3** MKNFITRA199 -  
NFI Transportation White  
18.6" wide by 2" high

NFI Transportation

- 4** MKNFITRA200 - USDOT 1486168  
16.4" wide by 1.7" high  
White



USDOT 1486168

# MKNFITRA163

## Owner Operator

### White Cab Kit

Updated 10-27-2023

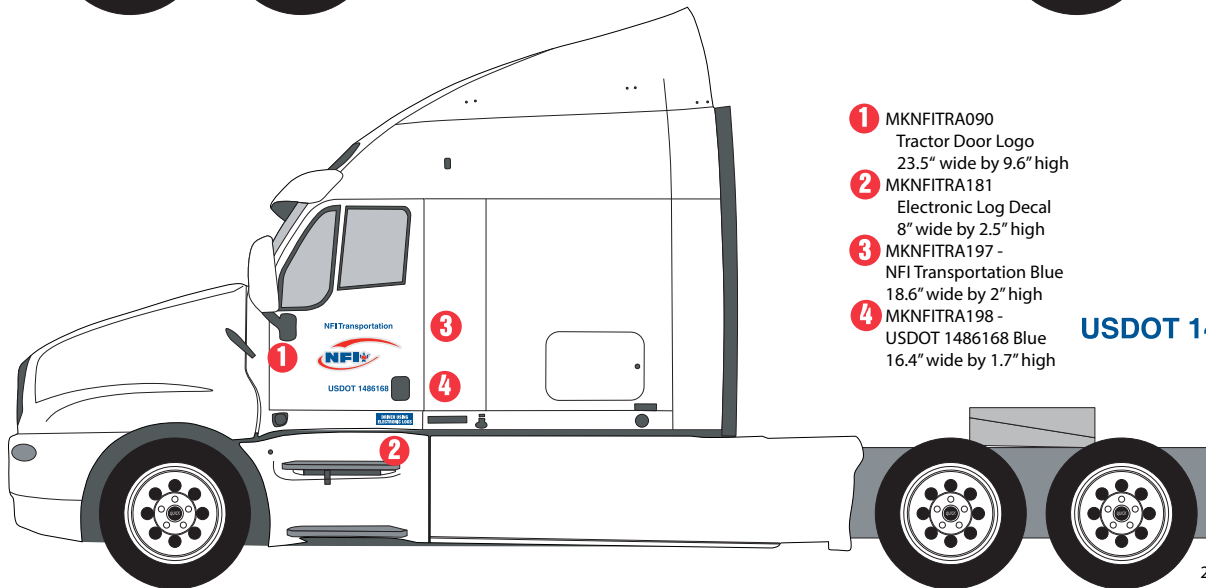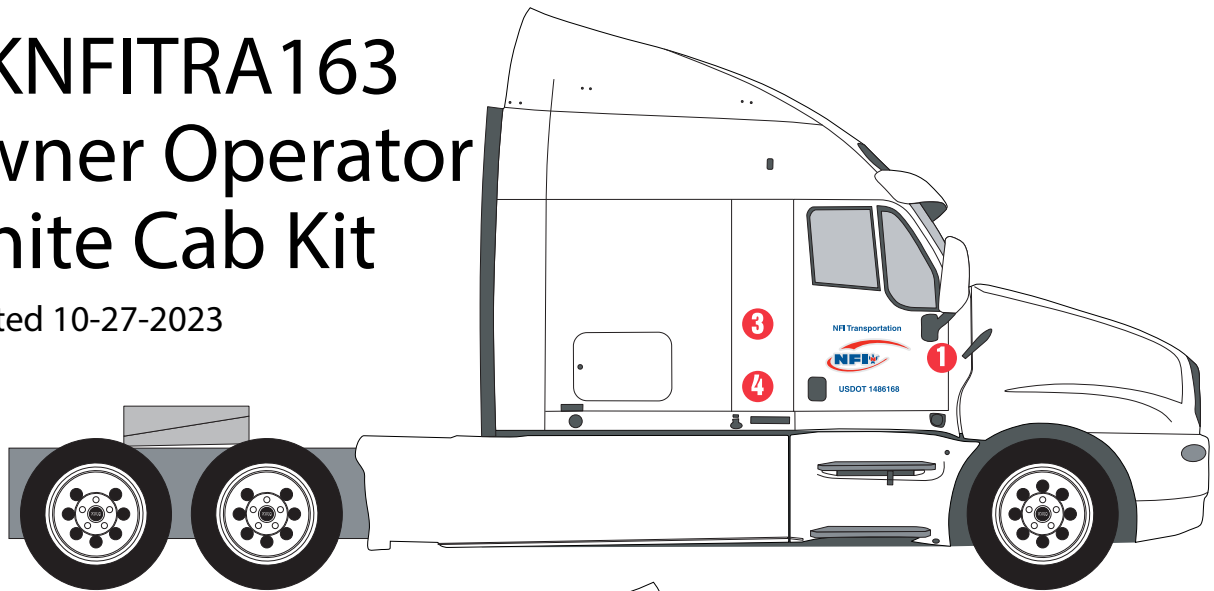

- 1 MKNFITRA090  
Tractor Door Logo  
23.5" wide by 9.6" high
- 2 MKNFITRA181  
Electronic Log Decal  
8" wide by 2.5" high
- 3 MKNFITRA197 -  
NFI Transportation Blue  
18.6" wide by 2" high
- 4 MKNFITRA198 -  
USDOT 1486168 Blue  
16.4" wide by 1.7" high

**USDOT 1486168**

20% scale

**vernon**  
graphics | promotions

	<b>PART NUMBER</b>	<b>QTY</b>	<b>DESCRIPTION</b>
1	MKNFITRA090	2	Tractor DOOR LOGO
2	MKNFITRA181	1	Electronic log decal
3	MKNFITRA197	2	NFI Transportation blue
4	MKNFITRA198	2	USDOT 1486169 Blue

**vernon**  
graphics | promotions

# Kit Number

## MKNFITRA163

NFI Transportation  
Owner Operator  
White Cab Kit Parts  
Updated 10-27-2023

- 1** MKNFITRA090 - Tractor Door Logo  
23.5" wide by 9.6" high  
Blue and red on reflective  
diecut



- 2** MKNFITRA181 -  
Electronic Log decal  
8" by 2.5" Blue

**DRIVER USING  
ELECTRONIC LOGS**

- 3** MKNFITRA197 -  
NFI Transportation Blue  
18.6" wide by 2" high


**NFI Transportation**

- 4** MKNFITRA198 -  
USDOT #1486168 Blue  
16.4" wide by 1.7" high

**USDOT 1486168**

# MKNFITRA173 Owner Operator Cab Kit

Updated 10-27-2023

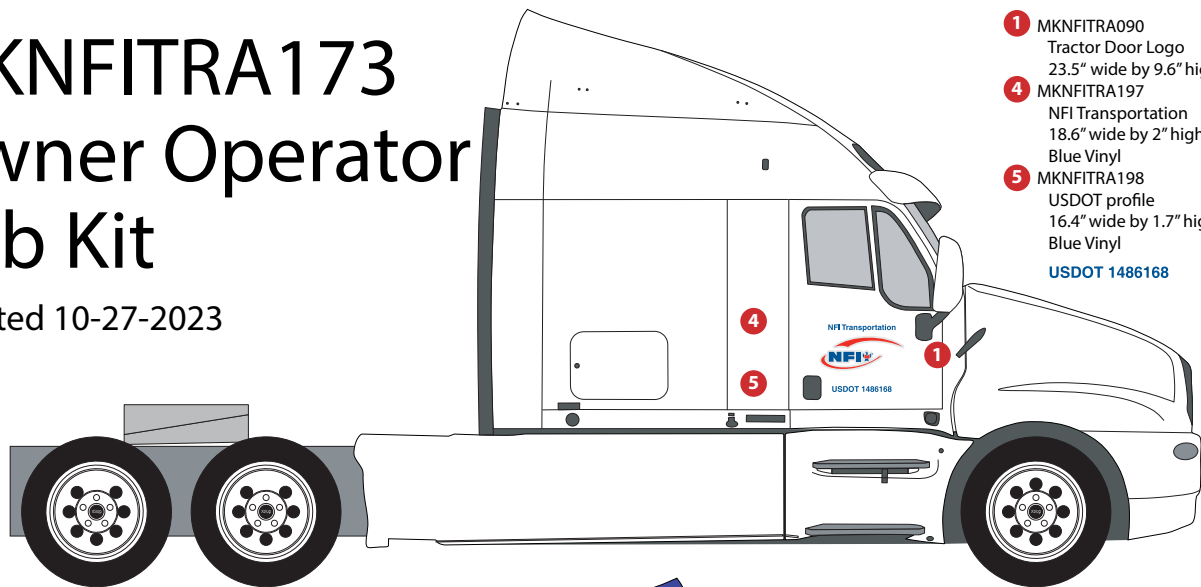


**Note: If the cab is light, use the blue vinyl markings as indicated.**

- 2** MKNFITRA180 for use on blue trucks

**DRIVER USING  
ELECTRONIC LOGS**

- 3** MKNFITRA181 for use on white trucks

**DRIVER USING  
ELECTRONIC LOGS**

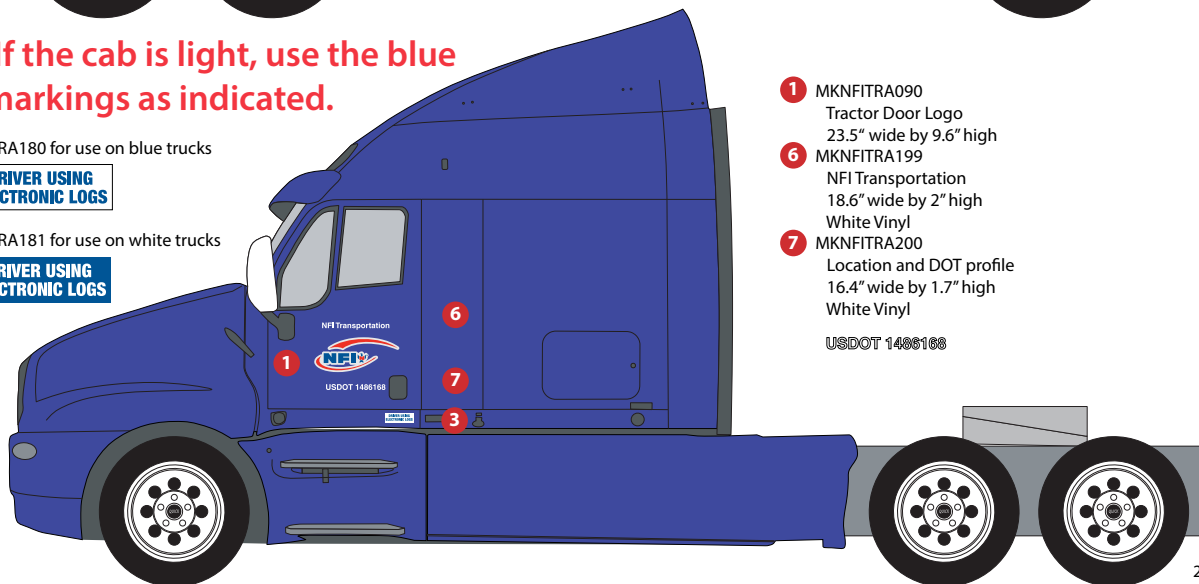

20% scale

**Note: If the cab is dark use the white vinyl markings.**

**vernon**  
graphics | promotions

PART NUMBER	QTY	DESCRIPTION
<b>1</b> MKNFITRA090	2	Tractor DOOR LOGO
<b>2</b> MKNFITRA180	1	Electronic Log for blue cab
<b>3</b> MKNFITRA181	1	Electronic log for white cab
<b>4</b> MKNFITRA197	2	NFI Transportation Blue Vinyl
<b>5</b> MKNFITRA198	2	USDOT Blue Vinyl
<b>6</b> MKNFITRA199	2	NFI Transportation White Vinyl
<b>7</b> MKNFITRA200	2	USDOT White Vinyl

**vernon**  
graphics | promotions

# Kit Number MKNFITRA173

## National Freight Owner Operator Cab Kit Parts

Updated 10-27-2023

- 1** MKNFITRA090 - Tractor Door Logo  
23.5" wide by 9.6" high  
Blue and red on reflective  
diecut



- 2** MKNFITRA180 - Electronic Log  
18" wide by 2.5" high for use on blue cabs  
Square Cut

**DRIVER USING  
ELECTRONIC LOGS**

- 3** MKNFITRA181 - Electronic Log  
18" wide by 2.5" high for use on white cabs  
Square Cut

**DRIVER USING  
ELECTRONIC LOGS**

- 4** MKNFITRA197 - NFI Transportation  
18.6" by 2" Blue diecut vinyl

**NFI Transportation**

- 5** MKNFITRA198 - DOT profile  
16.4" wide by 1.7" high  
Blue diecut vinyl

**USDOT 1486168**

- 6** MKNFITRA199 - NFI Transportation  
18.56" by 2" White diecut vinyl

**NFI Transportation**




- 7** MKNFITRA200 - US DOT  
16.4" wide by 1.7" high  
White diecut vinyl

**USDOT 1486168**



# Kit Number MKNFITRA100C

NFI Canada Blue Sleeper Cab Kit  
Updated 8-10-2023

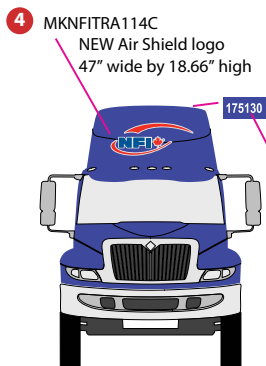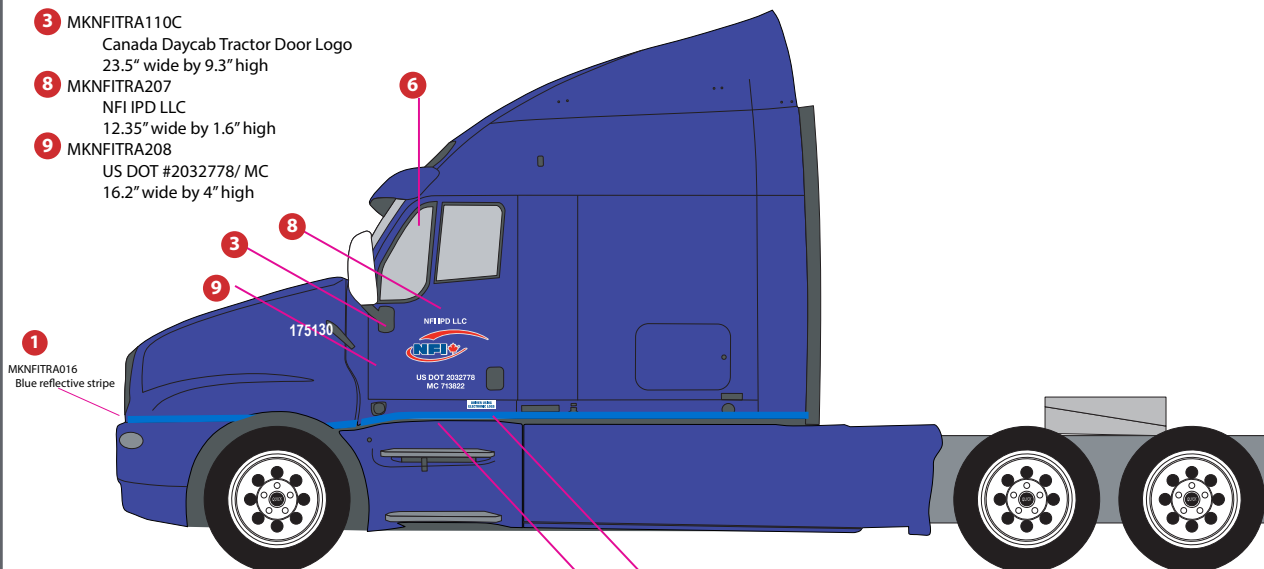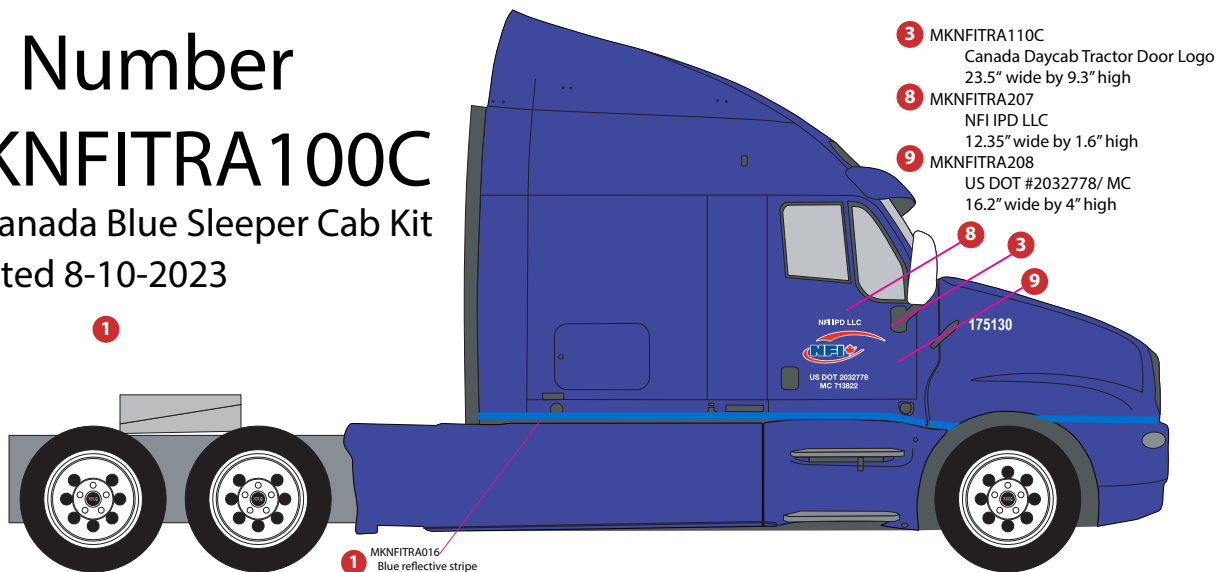

**Attention: nfi Driver**  
Your truck is equipped with an  
automated braking and  
Lane Departure System.  
Please contact your Driver Manager  
as soon as possible to review the  
System Driver Training video on  
MyLearning and/or MyNFI  
nfi.learning@nfitruck.com  
www.nfi.com

7 MKNFITRA180 - Electronic Logs  
8" wide by 2.5" high

5 MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Placement instruction sheet attached

**NFI Tire Check Reminder**  
NFI Standard  
Steer Tires = 110 psi  
Drive Tires = 100 psi  
Trailer Tires = 100 psi  
Check Air Pressure Daily  
Calibrate Gauge Monthly

**vernon**  
graphics | promotions

PART NUMBER	QTY	DESCRIPTION
1 MKNFITRA016	1	BLUE REFLECTIVE 2" X 25' ROLL
2 MKNFITRA094	3	5" WHITE 6 DIGIT UNIT #'S
3 MKNFITRA110C	2	CANADA CAB DOOR LOGO
4 MKNFITRA114C	1	CANADA AIR SHIELD LOGO
5 MKNFITRA164	1	TIRE CHECK REMINDER
6 MKNFITRA174	1	DRIVER REMINDER (FOR VISOR)
7 MKNFITRA180	1	ELECTRONIC LOG 8" X 2.5"
8 MKNFITRA207	2	NFI IPD LLC white
9 MKNFITRA208	2	USDOT #/ MC white

# Kit Number

## MKNFITRA100C

NFI Canada Blue Sleeper Cab Kit Parts

Updated 8-25-2023

- 1 MKNFITRA016 - Blue Reflective Stripe  
2" high by 25' roll

- 2 MKNFITRA094 - UNIT NUMBER  
5" White 6 digit Unit #'s  
Diecut material

0123456789

- 3 MKNFITRA110C - Canada Tractor Door Logo  
23.5" wide by 9.33" high  
Red and blue on reflective diecut



- 4 MKNFITRA114C - Canada Air Shield Logo  
47" wide by 18.66" high  
Red and Blue on reflective diecut



- 5 MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Green on white square cut  
Placement instruction  
sheet attached



- 6 MKNFITRA174 - Driver Reminder  
3" wide by 3" high  
Black on white square cut  
Place on the back of the visor  
inside cab

**Attention:** NFI Driver  
Your tractor is equipped with an  
automated Braking and  
Lane Departure System.  
Please contact your Driver Manager  
as soon as possible to review the  
System Driver Training video on  
My-Learning and/or My-NFI  
mylearning@nfinindustries.com  
www.my-nfi.com

- 7 MKNFITRA180 - Electronic Log Decal  
8" wide by 2.5" high  
Blue on white square cut

**DRIVER USING  
ELECTRONIC LOGS**

- 8 MKNFITRA207 -  
NFI IPD LLC  
12.35" by 1.6" White diecut

NFI IPD LLC



- 9 MKNFITRA208 - USDOT & MC  
16.2" wide by 4" high  
Diecut on white material  
Note blue indicates the color of vehicle  
and does not print

US DOT 2032778  
MC 713822


# Kit Number

## MKNFITRA105C

NFI Canada White Sleeper Cab Kit  
Updated 8-10-2023

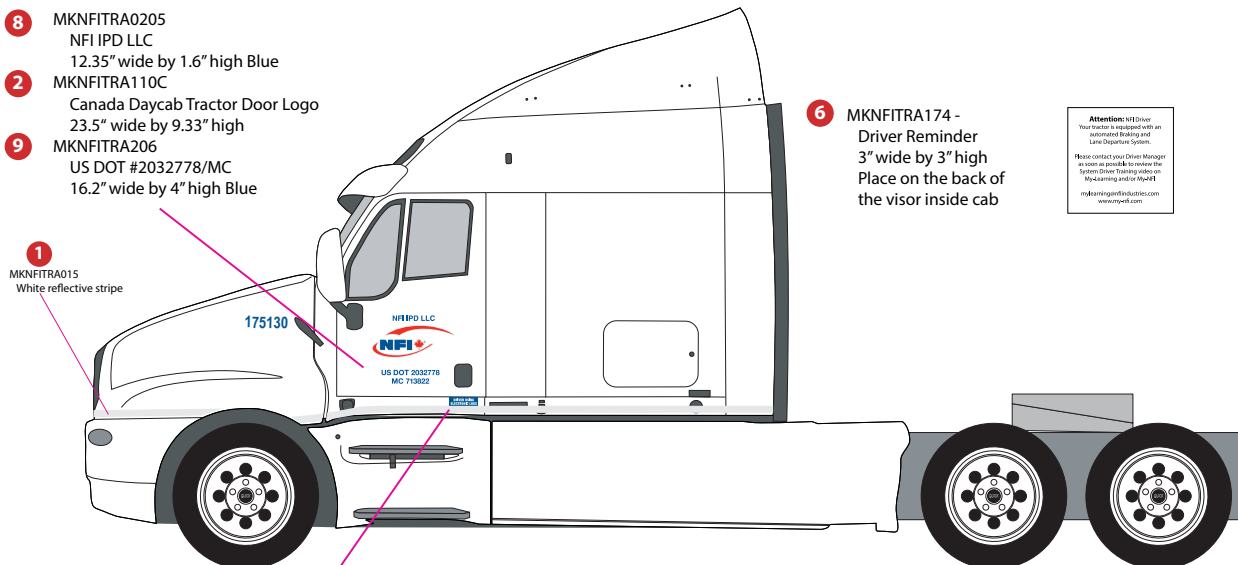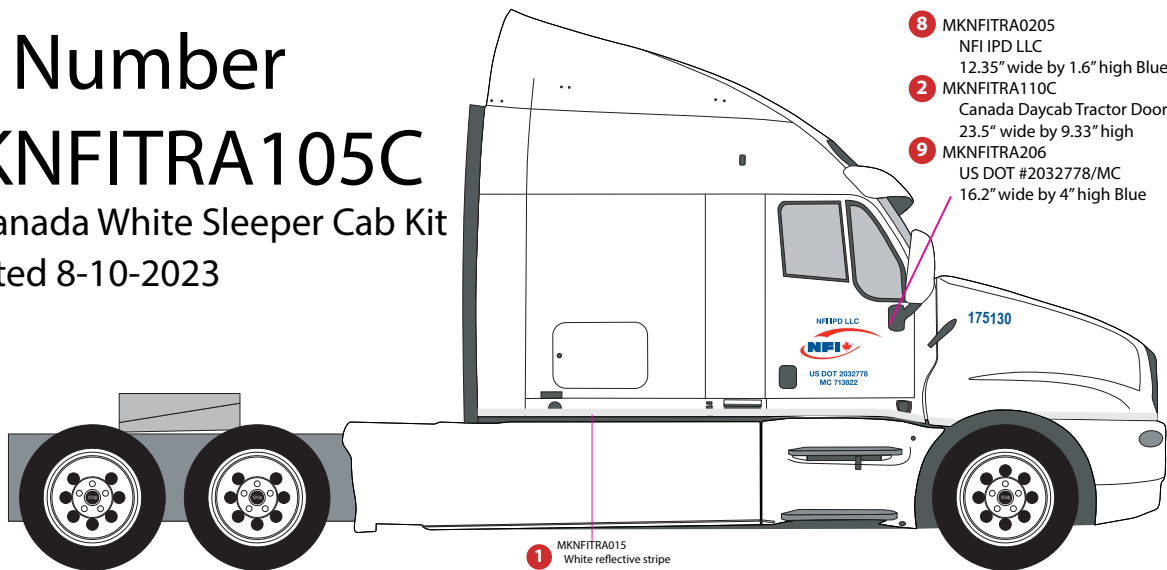

**Attention:** NFI Driver  
New Driver - Equipped with an  
Automated Braking and  
Lane Departure System.  
Please contact your Driver Manager  
to view or practice to review the  
System Driver Training video on  
Measuring and/or Read it!  
mknfitra@nfi.com  
www.nfi.com

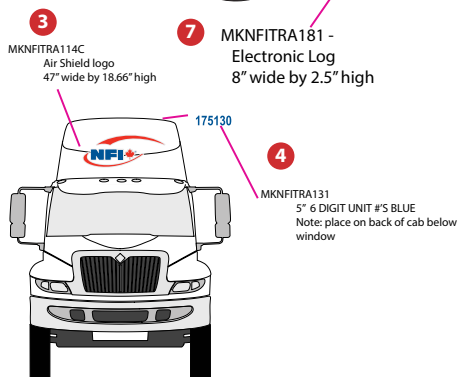

**Tire Check Reminder**  
NFI Standard  
Steer Tires = 110 psi  
Drive Tires = 100 psi  
Trailer Tires = 100 psi  
Check Air Pressure Daily  
Calibrate Gauge Monthly

5 MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Placement instruction sheet attached

**vernon**  
graphics | promotions

PART NUMBER	QTY	DESCRIPTION
1 MKNFITRA015	1	WHITE REFLECTIVE 2" X 25' ROLL
2 MKNFITRA110C	2	CANADA CAB DOOR LOGO
3 MKNFITRA114C	1	CANADA AIR SHIELD LOGO
4 MKNFITRA131	2	5" WHITE 6 DIGIT UNIT #'S
5 MKNFITRA164	1	TIRE CHECK REMINDER
6 MKNFITRA174	1	DRIVER REMINDER (FOR VISOR)
7 MKNFITRA181	1	ELECTRONIC LOG 8" X 2.5"
8 MKNFITRA205	2	NFI IPD LLC BLUE
9 MKNFITRA206	2	US DOT, MC BLUE

# Kit Number

## MKNFITRA105C

NFI Canada White Sleeper Cab Kit Parts

Updated 9-6-2023

- 1** MKNFITRA015 - White Reflective stripe  
2" x 25" roll

- 2** MKNFITRA110C - Tractor Door Logo  
23.5" wide by 9.33" high  
Red and Blue on reflective diecut



- 3** MKNFITRA114C - Canada Air Shield Logo  
47" wide by 18.66" high  
Red and Blue on reflective diecut



- 4** MKNFITRA131 - UNIT NUMBER  
5" Blue 6 digit Unit #'s  
Diecut material

**0123456789**

- 5** MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Green on white square cut  
Placement instruction sheet attached



- 6** MKNFITRA174 - Driver Reminder  
3" wide by 3" high  
Black on white square cut  
Place on the back of the visor  
inside cab



- 7** MKNFITRA181 - Electronic Log  
8" wide by 2.5" high  
Blue on white  
Square cut

**DRIVER USING  
ELECTRONIC LOGS**

- 8** MKNFITRA205 -  
NFI IPD LLC  
12.35" by 1.6" Blue diecut

**NFI IPD LLC**

- 9** MKNFITRA206 - USDOT & MC  
17.29" wide by 4" high  
Diecut Blue material


**US DOT 2032778  
MC 713822**

**vernon**  
graphics | promotions

# Kit Number

## MKNFITRA125C

NFI Canada White Day Cab Kit  
Updated 9-6-2023

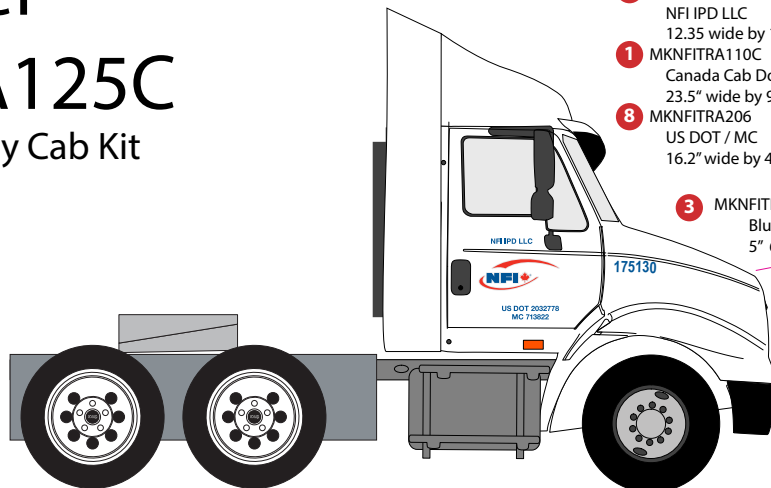


- 7 MKNFITRA205  
NFI IPD LLC  
12.35 wide by 1.6" high Blue
- 1 MKNFITRA110C  
Canada Cab Door Logo  
23.5" wide by 9.33" high
- 8 MKNFITRA206  
US DOT / MC  
16.2" wide by 4" high Blue
- 3 MKNFITRA131  
Blue unit numbers  
5" 6 digits

- 5 MKNFITRA174 -  
Driver Reminder  
3" wide by 3" high  
Place on the back of  
the visor inside cab

**Attention: 1st Driver**  
Your truck is equipped with an  
automated braking and  
Lane Departure System.  
Please contact your Driver Manager  
as soon as possible to receive the  
System Driver Training video on  
the company's intranet site at  
www.nfidot.com


- 3 MKNFITRA131  
Blue unit numbers  
5" 6 digits

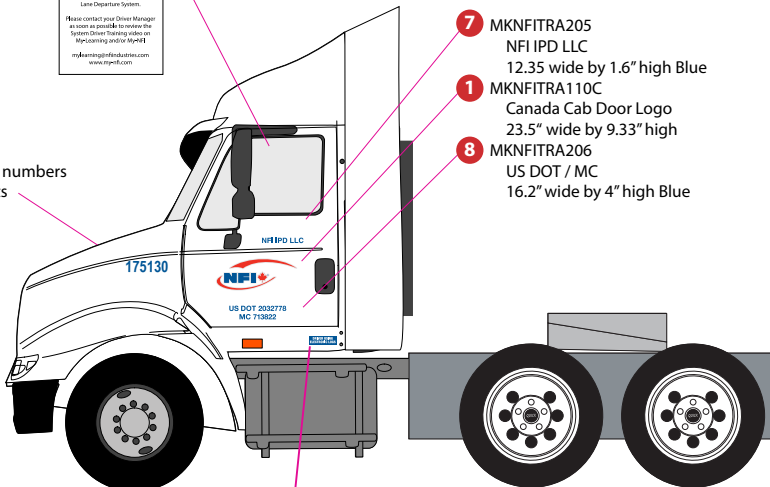

- 7 MKNFITRA205  
NFI IPD LLC  
12.35 wide by 1.6" high Blue
- 1 MKNFITRA110C  
Canada Cab Door Logo  
23.5" wide by 9.33" high
- 8 MKNFITRA206  
US DOT / MC  
16.2" wide by 4" high Blue

- 2 MKNFITRA114C  
Canada Air Shield logo  
47" wide by 18.66 high

- 6 MKNFITRA181 -  
Electronic Logs  
8" wide by 2.5" high

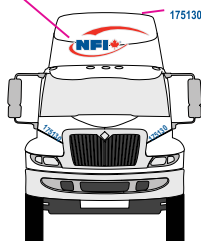

- 3 MKNFITRA131  
5" Blue 6 DIGIT UNIT #'S  
Note: place on back of cab below  
window

- 4 MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Placement instruction sheet attached

**Tire Check Reminder**  
NFI Standard  
Steer Tires = 110 psi  
Drive Tires = 100 psi  
Trailer Tires = 100 psi  
Check Air Pressure Daily  
Calibrate Gauge Monthly

20% scale

**vernon**  
graphics | promotions

PART NUMBER	QTY	DESCRIPTION
1 MKNFITRA110C	2	CANADA CAB DOOR LOGO
2 MKNFITRA114C	1	CANADA AIR SHIELD LOGO
3 MKNFITRA131	3	5" BLUE 6 DIGIT UNIT #'S
4 MKNFITRA164	1	TIRE CHECK REMINDER
5 MKNFITRA174	1	DRIVER REMINDER (FOR VISOR)
6 MKNFITRA181	1	ELECTRONIC LOG
7 MKNFITRA205	2	NFI IPD LLC
8 MKNFITRA206	2	DOT, MC BLUE



# Kit Number MKNFITRA125C

## NFI Canada White

### Day Cab Parts

Updated 9-6-2023

- 1** MKNFITRA110C - Canada Cab Door Decal  
23.5" wide by 9.33" high  
Red and Blue diecut on reflective



- 2** MKNFITRA114C - NFI Canada Airshield logo  
47" wide by 18.66" high  
Red and Blue diecut on reflective



- 3** MKNFITRA131 - UNIT NUMBER  
5" 6 digit Unit #'s  
Diecut blue material

0123456789

- 4** MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Placement instruction sheet attached



- 5** MKNFITRA174 - Driver Reminder  
3" wide by 3" high  
Place on the back of the visor  
inside cab



- 6** MKNFITRA181 - Long Stroke Brake  
8" wide by 2.5" high square cut

**DRIVER USING  
ELECTRONIC LOGS**

- 8** MKNFITRA205 - NFI IPD LLC  
12.35" wide by 1.6" high  
Blue diecut material

**NFI IPD LLC**

- 9** MKNFITRA206 - USDOT, MC  
16.2" wide by 4" high  
Diecut blue material

**US DOT 2032778  
MC 713822**


**vernon**  
graphics | promotions

# Kit Number

## MKNFITRA126C

NFI Canada Blue Day Cab Kit

Updated 8-10-2023

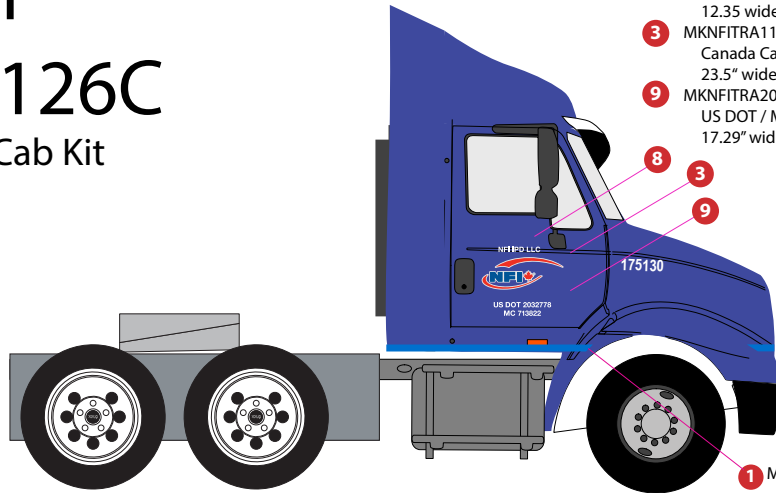


- 8 MKNFITRA207  
NFI IPD LLC  
12.35 wide by 1.6" high White
- 3 MKNFITRA110C  
Canada Cab Door Logo  
23.5" wide by 9.6" high
- 9 MKNFITRA208  
US DOT / MC  
17.29" wide by 4" high White

- 8 MKNFITRA207  
NFI IPD LLC  
12.35 wide by 1.6" high White
- 3 MKNFITRA110C  
Canada Cab Door Logo  
23.5" wide by 9.6" high
- 9 MKNFITRA208  
US DOT / MC  
17.29" wide by 4" high White

- 6 MKNFITRA174 -  
Driver Reminder  
3" wide by 3" high  
Place on the back of  
the visor inside cab

**Attention:** All Drivers  
Your vehicle is equipped with an  
automated braking and  
Lane Departure System.  
Please contact your Driver Manager  
as soon as possible to review the  
System Driver Training video on  
MyLearning and/or My401  
mknfitra@vernon.com  
www.mknfitra.com

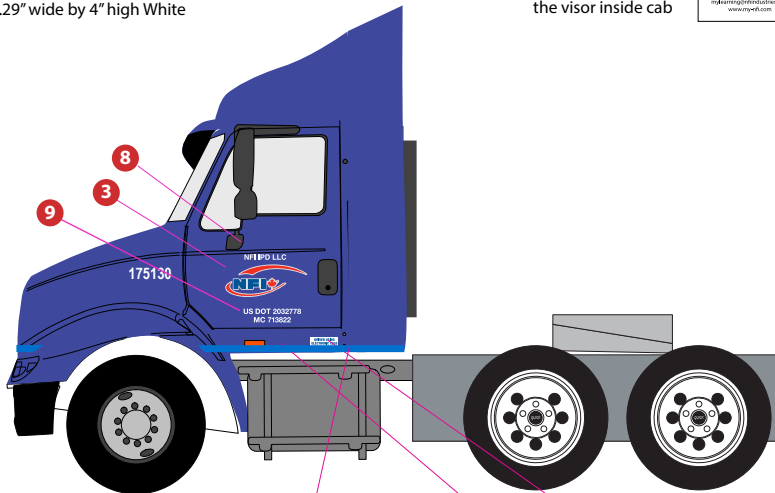


- 4 MKNFITRA114  
NEW Air Shield logo  
47" wide by 19.2" high

- 1 MKNFITRA016  
Blue reflective stripe

- 7 MKNFITRA180 - Electronic Logs  
8" wide by 2.5" high

- 5 MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Placement instruction sheet attached

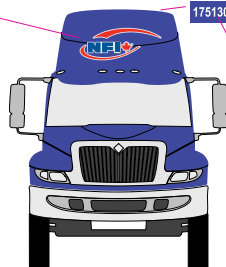

- 2 MKNFITRA094  
5" 6 DIGIT UNIT #5 WHITE  
Note: place on back of cab below  
window

**Tire Check Reminder**  
NFI Standard  
Steer Tires = 110 psi  
Drive Tires = 100 psi  
Trailer Tires = 100 psi  
Check Air Pressure Daily  
Calibrate Gauge Monthly

20% scale

**vernon**  
graphics | promotions

PART NUMBER	QTY	DESCRIPTION
1 MKNFITRA016	1	BLUE REFLECTIVE 2" X 25' ROLL
2 MKNFITRA094	3	5" WHITE 6 DIGIT UNIT #5
3 MKNFITRA110C	2	CANADA CAB DOOR LOGO
4 MKNFITRA114C	1	CANADA AIR SHIELD LOGO
5 MKNFITRA164	1	TIRE CHECK REMINDER
6 MKNFITRA174	1	DRIVER REMINDER (FOR VISOR)
7 MKNFITRA180	1	ELECTRONIC LOG 8" X 2.5"
8 MKNFITRA204	2	NFI IPD LLC
9 MKNFITRA205	2	US DOT #/ MC

# Kit Number MKNFITRA126C

## NFI Canada Blue

### Day Cab Parts

Updated 9-6-2023

- 1** MKNFITRA016 - Blue Reflective Stripe  
2" high by 25' roll

- 2** MKNFITRA094 - UNIT NUMBER  
5" white 6 digit Unit #'s  
White diecut material

0123456789

- 3** MKNFITRA110C - Canada Cab Door Decal  
23.5" wide by 9.33" high  
Red and Blue on reflective diecut



- 4** MKNFITRA114C - NFI Canada Airshield logo  
47" wide by 18.66" high  
Red and Blue on reflective diecut



- 5** MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Green on white square cut  
Placement instruction sheet attached



- 6** MKNFITRA174 - Driver Reminder  
3" wide by 3" high  
Place on back of visor inside cab  
Black on white square cut



- 7** MKNFITRA180 - Long Stroke Brake  
8" wide by 2.5" high  
Blue on white  
square cut

**DRIVER USING  
ELECTRONIC LOGS**

- 8** MKNFITRA207- Operated by NFI IPD LLC  
12.35" wide by 1.6" high  
White diecut

**NFI IPD LLC**


- 9** MKNFITRA208 - USDOT, MC  
16.2" wide by 4" high  
White diecut (blue does not print)

**US DOT 2032778  
MC 713822**

**vernon**  
graphics | promotions

# MKNFITRA173C Canada Owner Operator Cab Kit

Updated 8-10-2023

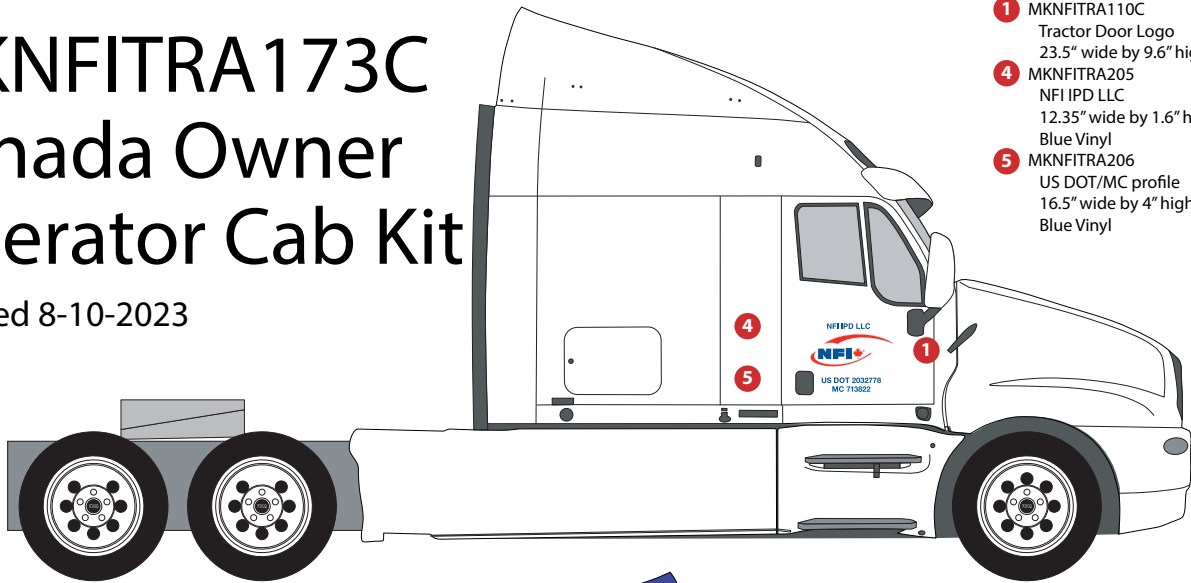

- 1 MKNFITRA110C  
Tractor Door Logo  
23.5" wide by 9.6" high
- 4 MKNFITRA205  
NFI IPD LLC  
12.35" wide by 1.6" high  
Blue Vinyl
- 5 MKNFITRA206  
US DOT/MC profile  
16.5" wide by 4" high  
Blue Vinyl


**Note: If the cab is light, use the blue vinyl markings as indicated.**

- 2 MKNFITRA180 for use on blue trucks

**DRIVER USING  
ELECTRONIC LOGS**

- 3 MKNFITRA181 for use on white trucks

**DRIVER USING  
ELECTRONIC LOGS**

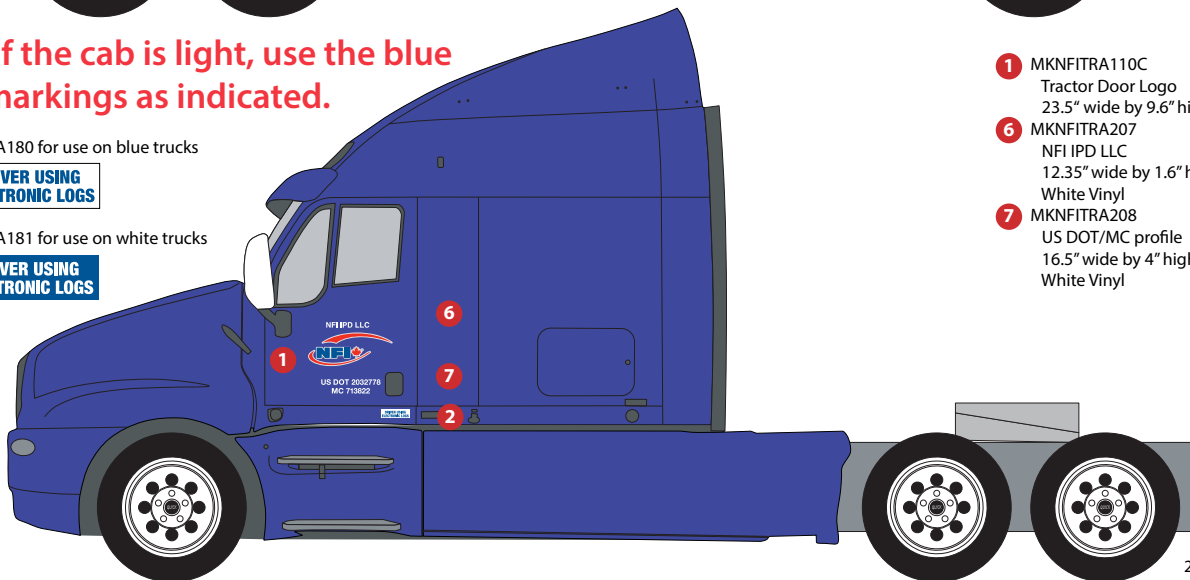

- 1 MKNFITRA110C  
Tractor Door Logo  
23.5" wide by 9.6" high
- 6 MKNFITRA207  
NFI IPD LLC  
12.35" wide by 1.6" high  
White Vinyl
- 7 MKNFITRA208  
US DOT/MC profile  
16.5" wide by 4" high  
White Vinyl

20% scale

**Note: If the cab is dark use the white vinyl markings.**

**vernon**  
graphics | promotions

PART NUMBER	QTY	DESCRIPTION
1 MKNFITRA110C	2	Tractor DOOR LOGO
2 MKNFITRA180	1	Electronic Log for blue cab
3 MKNFITRA181	1	Electronic log for white cab
4 MKNFITRA205	2	NFI IPD LLC Blue Vinyl
5 MKNFITRA206	2	US DOT Blue Vinyl
6 MKNFITRA207	2	NFI IPD LLC White Vinyl
7 MKNFITRA208	2	US DOT White Vinyl

**vernon**  
graphics | promotions

# Kit Number MKNFITRA173C

## National Freight Canada

### Owner Operator Cab Kit Parts

Updated 8-10-2023

- 1** MKNFITRA110C - Canada Tractor Door Logo  
23.5" w by 9.6" h  
Blue and red on reflective  
diecut



- 2** MKNFITRA180 - Electronic Log  
8" w by 2.5" h for use on blue cabs  
Square Cut

**DRIVER USING  
ELECTRONIC LOGS**

- 3** MKNFITRA181 - Electronic Log  
8" w by 2.5" h for use on white cabs  
Square Cut

**DRIVER USING  
ELECTRONIC LOGS**

- 4** MKNFITRA205 - NFI IPD LLC  
12.35" w by 1.6" h Blue diecut vinyl

**NFI IPD LLC**

- 5** MKNFITRA206- Location and DOT profile  
16.2" w by 4" h  
Blue diecut vinyl

**US DOT 2032778  
MC 713822**

- 6** MKNFITRA207- Operated By NFI IPD LLC  
12.35" w by 1.6" h White diecut vinyl

**NFI IPD LLC**

- 7** MKNFITRA208 - US DOT profile  
16.2" w by 4" h  
White diecut vinyl

**US DOT 2032778  
MC 713822**



**Updated 9-17-2018**

**Shown below are photos of the proper mounting of the decal.**



44

# Kit Number

## MKNFITRA209

### NFI Transportation

### Blue Mack Anthem


### Day Cab w/Peep Window Kit

### 1-29-2024

- 1 MKNFITRA025 - Breakdown Support Decal  
3.75" wide by 2.75" high  
Placement in dash  
shown at 50%



- 2 MKNFITRA026 -  
DOT Inspection/Expiration Decal  
3.5" wide by 5" high  
Place on drivers wing  
window facing outside



- 4 MKNFITRA113  
Watch your step Decal  
6" wide by 1.375" high





- 9 MKNFITRA174 -  
Driver Reminder  
3" wide by 3" high  
Place on the back of  
the visor inside cab

- 12 MKNFITRA199 -  
NFI Transportation White  
18.6" wide by 2" high  
NFI Transportation


- 5 MKNFITRA114  
Air Shield logo  
47" wide by 18" high

- 6 MKNFITRA094  
5" White 6 DIGIT UNIT #'S  
Note: place on back of cab below  
window

- 13 MKNFITRA200 -  
USDOT 1486168 White  
16.4" wide by 1.7" high  
USDOT 1486168

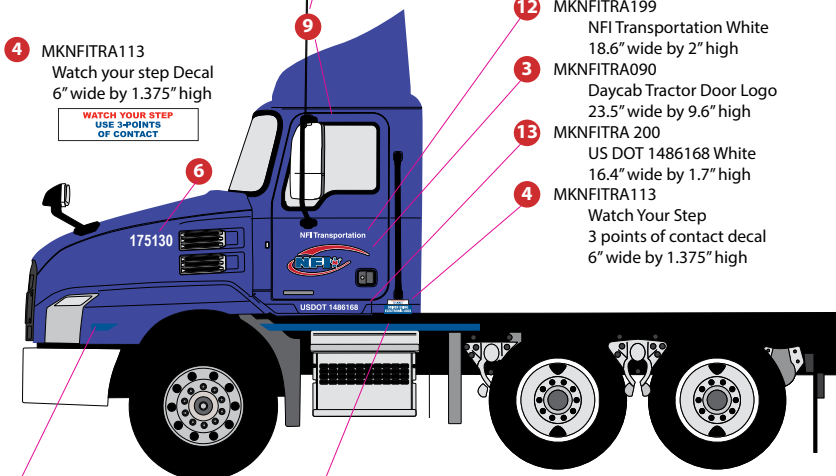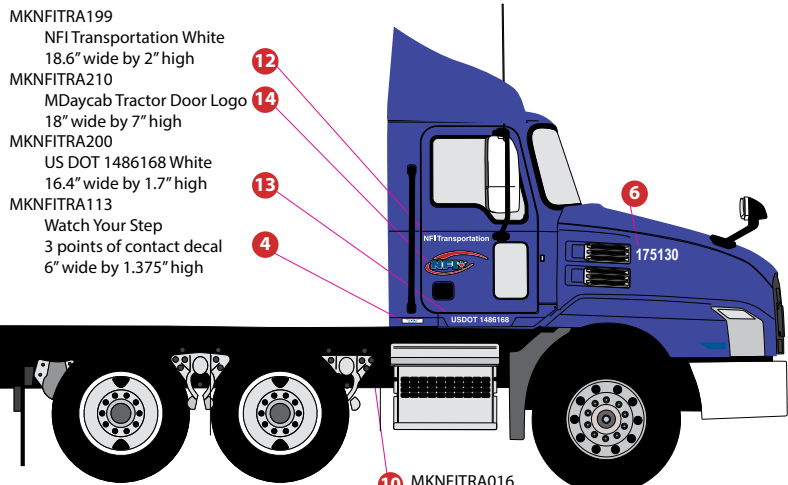

- 10 MKNFITRA016  
Blue reflective stripe
- 7 MKNFITRA148 - NFI Cares Decal  
7" wide by 2" high  
Place on the dashboard



- 8 MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Placement instruction sheet attached



- 11 MKNFITRA181 Electronic Logs  
8" wide by 2.5" high



PART NUMBER	QTY	DESCRIPTION
1 MKNFITRA025	1	BREAKDOWN SUPPORT DECAL
2 MKNFITRA026	1	DOT INSPECTION DECAL
3 MKNFITRA090	1	DAYCAB DOOR Logo 23.5" wide
4 MKNFITRA113	2	WATCH YOUR STEP 3-POINTS
5 MKNFITRA114	1	AIR SHIELD LOGO
6 MKNFITRA094	3	5" White 6 DIGIT UNIT #'S
7 MKNFITRA148	1	NFI CARES
8 MKNFITRA164	1	TIRE CHECK REMINDER
9 MKNFITRA174	1	DRIVER REMINDER (FOR VISOR)
10 MKNFITRA016	1	BLUE REFLECTIVE 2" X 25' ROLL
11 MKNFITRA181	1	ELECTRONIC LOG
12 MKNFITRA199	2	NFI TRANSPORTATION White - 18.6" w x 2" high
13 MKNFITRA200	2	USDOT 1486168 White - 16.4" w x 1.7" high
13 MKNFITRA210	1	DAYCAB DOOR LOGO 18" WIDE

**vernon**  
graphics | promotions

# Kit Number


## MKNFITRA209

NFI Transportation  
Mack Anthem Blue Day Cab  
with Peep Window Kit Kit Parts  
Updated 2-7-2024

- 1 MKNFITRA025 - Breakdown Support Decal  
3.75" wide by 2.75" high  
Blue on white square cut  
Place in dash



- 2 MKNFITRA026 - DOT Inspection Decal  
3.5" wide by 5" high  
Place on drivers  
wing window  
facing outside  
Dates change yearly

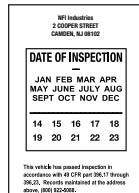

- 3 MKNFITRA090 - Daycab door logo  
23" wide by 8.8" high  
Red and Blue on reflective diecut



- 4 MKNFITRA113  
Watch Your Step  
3 points of contact decal  
6" wide by 1.375" high  
Red and blue on white square cut



- 5 MKNFITRA114 - Air Shield Logo  
47" wide by 18" high  
Red and Blue, Diecut on reflective material



- 6 MKNFITRA094 - UNIT NUMBER  
5" Blue 6 digit Unit #'s  
White diecut **0123456789**

- 7 MKNFITRA148 - NFI Cares  
7" wide by 2" high  
Blue and red on white  
Square cut Place on the dashboard



- 8 MKNFITRA164 - Tire Check Reminder  
2.75" wide by 1.75" high  
Green on white square cut  
See placement instruction sheet



- 9 MKNFITRA174 - Driver Reminder  
3" wide by 3" high  
Place on back of visor inside cab  
Black on white square cut



- 10 MKNFITRA016 - Bluer effective 2" X 25' Roll

- 11 MKNFITRA181 - Electronic log decal  
8" wide by 2.5" high  
Blue on white square cut



- 12 MKNFITRA199 - NFI TRANSPORTATION  
18.6" wide by 2" high  
White



NFI Transportation

- 13 MKNFITRA200 - USDOT 1486168  
16.4" wide by 1.7" high  
White

USDOT 1486168



- 14 MKNFITRA210 - Mack tractor door logo  
with Peep Window  
18" wide by 7" high  
Red and Blue on reflective diecut



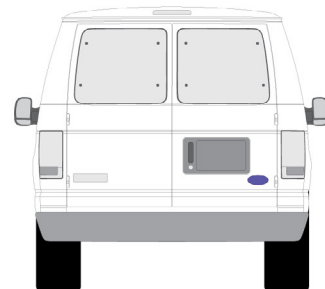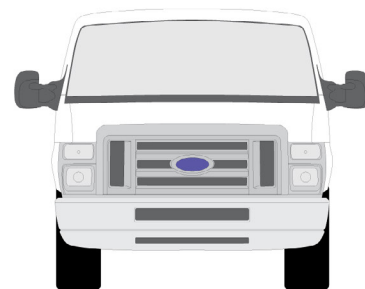

- ❶ 2 each MKNFITRA114 - 47" wide by 19.2" high, Red and Blue, diecut reflective material
- ❷ 2 each MKNFIPILOT MHE - 6" High "M" - 96" wide by 6.265" high, sapphire blue plotter cut vinyl
- ❸ 2 each MKNFITRA211 - 3" Unit Number - 4 digit sapphire blue plotter cut vinyl

**MKNFIVLG - NFI MHE FLEET SERVICES Large Logo**  
**E-350 Extended Van layout • 2-16-2024 • pz**

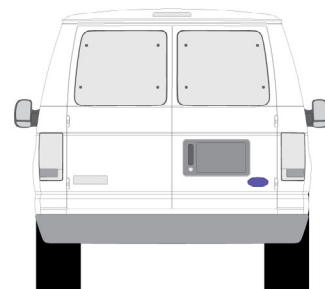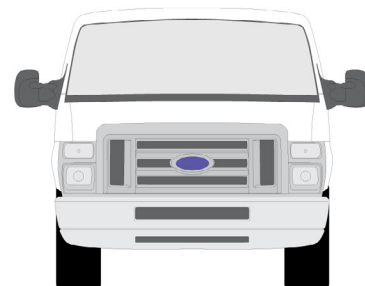

- ❶ 2 each MKNFITRA110 - 35.5" wide by 11.5" high, Red and Blue, diecut reflective material
- ❷ 2 each MKNFIPILOT MHE - 6" High "M" - 96" wide by 6.265" high, sapphire blue plotter cut vinyl
- ❸ 2 each MKNFITRA211 - 3" Unit Number - 4 digit sapphire blue plotter cut vinyl

**MKNFIVSM - NFI MHE FLEET SERVICES Small Logo**  
**E-350 Extended Van layout 2 - 2-16-2024 • pz**





